

| | | | |
|---|-------|--|--------|
| Dimensions and weights | REF•1 | General repair procedures | REF•5 |
| Jacking and vehicle support | REF•1 | Tools and working facilities | REF•6 |
| Radio/cassette unit anti-theft system | REF•1 | MOT test checks | REF•8 |
| Conversion factors | REF•2 | Fault finding | REF•12 |
| Use of English | REF•3 | Glossary of technical terms | REF•18 |
| Buying spare parts | REF•4 | Index | REF•22 |
| Vehicle identification | REF•4 | | |

Dimensions and weights

Note: All figures are approximate, and may vary according to model. Refer to manufacturer's data for exact figures.

Dimensions

| | |
|---|---------|
| Overall length | 4988 mm |
| Overall width (including mirrors) | 2015 mm |
| Overall height (unladen) | 1358 mm |
| Wheelbase | 2870 mm |

Weights

| | |
|--|---------|
| Kerb weight | 1770 kg |
| Maximum gross vehicle weight | 2190 kg |
| Maximum towing weight: | |
| Braked trailer | 1500 kg |
| Unbraked trailer | 750 kg |
| Maximum axle load: | |
| Front axle | 1050 kg |
| Rear axle | 1170 kg |
| Maximum roof rack load | 100 kg |

Jacking and vehicle support

The jack supplied with the vehicle tool kit should only be used for changing the roadwheels - see "Wheel changing" at the front of this manual. When carrying out any other kind of work, raise the vehicle using a hydraulic (or "trolley") jack, and always supplement the jack with axle stands positioned under the vehicle jacking points.

To raise the front of the vehicle, place a block of wood on the jack head and position

the jack underneath the centre of the front crossmember. Lift the vehicle to the required height and support it on axle stands positioned underneath the vehicle jacking points on the sills.

To raise the rear of the vehicle, place a block of wood on the jack head and position the jack underneath the centre of the rear crossmember. Lift the vehicle to the required height and support it on axle stands

positioned underneath the vehicle jacking points on the sills.

The jack supplied with the vehicle locates in the jacking points on the sills. Ensure that the jack head is correctly engaged before attempting to raise the vehicle.

Never work under, around, or near a raised vehicle, unless it is adequately supported in at least two places.

Radio/cassette unit anti-theft system - precaution

Some models are equipped with an audio system which includes an anti-theft feature, to deter thieves. If the power source to the unit is cut, the anti-theft system will activate. Even if the power source is immediately reconnected, the radio/cassette unit will not function until

the correct security code has been entered. Therefore if you do not know the correct security code for the unit, **do not** disconnect the battery negative lead, or remove the radio/cassette unit from the vehicle.

The procedure for reprogramming a unit that has been disconnected from its power supply varies from model to model - consult the handbook supplied with the unit for specific details or refer to your Jaguar dealer.

REF•2 Conversion factors

Length (distance)

| | | |
|-------------|---------------------------|------------------------|
| Inches (in) | x 25.4 = Millimetres (mm) | x 0.0394 = Inches (in) |
| Feet (ft) | x 0.305 = Metres (m) | x 3.281 = Feet (ft) |
| Miles | x 1.609 = Kilometres (km) | x 0.621 = Miles |

Volume (capacity)

| | | |
|--|---|--|
| Cubic inches (cu in; in ³) | x 16.387 = Cubic centimetres (cc; cm ³) | x 0.061 = Cubic inches (cu in; in ³) |
| Imperial pints (Imp pt) | x 0.568 = Litres (l) | x 1.76 = Imperial pints (Imp pt) |
| Imperial quarts (Imp qt) | x 1.137 = Litres (l) | x 0.88 = Imperial quarts (Imp qt) |
| Imperial quarts (Imp qt) | x 1.201 = US quarts (US qt) | x 0.833 = Imperial quarts (Imp qt) |
| US quarts (US qt) | x 0.946 = Litres (l) | x 1.057 = US quarts (US qt) |
| Imperial gallons (Imp gal) | x 4.546 = Litres (l) | x 0.22 = Imperial gallons (Imp gal) |
| Imperial gallons (Imp gal) | x 1.201 = US gallons (US gal) | x 0.833 = Imperial gallons (Imp gal) |
| US gallons (US gal) | x 3.785 = Litres (l) | x 0.264 = US gallons (US gal) |

Mass (weight)

| | | |
|-------------|--------------------------|-----------------------|
| Ounces (oz) | x 28.35 = Grams (g) | x 0.035 = Ounces (oz) |
| Pounds (lb) | x 0.454 = Kilograms (kg) | x 2.205 = Pounds (lb) |

Force

| | | |
|------------------------|-----------------------------------|----------------------------------|
| Ounces-force (ozf; oz) | x 0.278 = Newtons (N) | x 3.6 = Ounces-force (ozf; oz) |
| Pounds-force (lbf; lb) | x 4.448 = Newtons (N) | x 0.225 = Pounds-force (lbf; lb) |
| Newtons (N) | x 0.1 = Kilograms-force (kgf; kg) | x 9.81 = Newtons (N) |

Pressure

| | | |
|---|---|--|
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 0.070 = Kilograms-force per square centimetre (kgf/cm ² ; kg/cm ²) | x 14.223 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 0.068 = Atmospheres (atm) | x 14.696 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 0.069 = Bars | x 14.5 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 6.895 = Kilopascals (kPa) | x 0.145 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) |
| Kilopascals (kPa) | x 0.01 = Kilograms-force per square centimetre (kgf/cm ² ; kg/cm ²) | x 98.1 = Kilopascals (kPa) |
| Millibar (mbar) | x 100 = Pascals (Pa) | x 0.01 = Millibar (mbar) |
| Millibar (mbar) | x 0.0145 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 68.947 = Millibar (mbar) |
| Millibar (mbar) | x 0.75 = Millimetres of mercury (mmHg) | x 1.333 = Millibar (mbar) |
| Millibar (mbar) | x 0.401 = Inches of water (inH ₂ O) | x 2.491 = Millibar (mbar) |
| Millimetres of mercury (mmHg) | x 0.535 = Inches of water (inH ₂ O) | x 1.868 = Millimetres of mercury (mmHg) |
| Inches of water (inH ₂ O) | x 0.036 = Pounds-force per square inch (psi; lbf/in ² ; lb/in ²) | x 27.68 = Inches of water (inH ₂ O) |

Torque (moment of force)

| | | |
|-------------------------------------|--|---|
| Pounds-force inches (lbf in; lb in) | x 1.152 = Kilograms-force centimetre (kgf cm; kg cm) | x 0.868 = Pounds-force inches (lbf in; lb in) |
| Pounds-force inches (lbf in; lb in) | x 0.113 = Newton metres (Nm) | x 8.85 = Pounds-force inches (lbf in; lb in) |
| Pounds-force inches (lbf in; lb in) | x 0.083 = Pounds-force feet (lbf ft; lb ft) | x 12 = Pounds-force inches (lbf in; lb in) |
| Pounds-force feet (lbf ft; lb ft) | x 0.138 = Kilograms-force metres (kgf m; kg m) | x 7.233 = Pounds-force feet (lbf ft; lb ft) |
| Pounds-force feet (lbf ft; lb ft) | x 1.356 = Newton metres (Nm) | x 0.738 = Pounds-force feet (lbf ft; lb ft) |
| Newton metres (Nm) | x 0.102 = Kilograms-force metres (kgf m; kg m) | x 9.804 = Newton metres (Nm) |

Power

| | | |
|-----------------|---------------------|----------------------------|
| Horsepower (hp) | x 745.7 = Watts (W) | x 0.0013 = Horsepower (hp) |
|-----------------|---------------------|----------------------------|

Velocity (speed)

| | | |
|--------------------------------|--|--|
| Miles per hour (miles/hr; mph) | x 1.609 = Kilometres per hour (km/hr; kph) | x 0.621 = Miles per hour (miles/hr; mph) |
|--------------------------------|--|--|

Fuel consumption*

| | | |
|------------------------|---------------------------------------|----------------------------------|
| Miles per gallon (mpg) | x 0.354 = Kilometres per litre (km/l) | x 2.825 = Miles per gallon (mpg) |
|------------------------|---------------------------------------|----------------------------------|

Temperature

| | |
|--------------------------------------|---|
| Degrees Fahrenheit = (°C x 1.8) + 32 | Degrees Celsius (Degrees Centigrade; °C) = (°F - 32) x 0.56 |
|--------------------------------------|---|

* It is common practice to convert from miles per gallon (mpg) to litres/100 kilometres (l/100km), where mpg x l/100 km = 282

As the main part of this book has been written in the US, it uses the appropriate US component names, phrases, and spelling. Some of these differ from those used in the UK. Normally, these cause no difficulty, but to make sure, a glossary is printed below. When ordering spare parts, remember the parts list may use some of these words:

| AMERICAN | ENGLISH | AMERICAN | ENGLISH |
|----------------------------------|-------------------------------------|---|----------------------------|
| Aluminum | Aluminium | Muffler | Silencer |
| Antenna | Aerial | Odor | Odour |
| Authorized | Authorised | Oil pan | Sump |
| Auto parts stores | Motor factors | Open flame | Naked flame |
| Axleshaft | Halfshaft | Panel wagon/van | Van |
| Back-up | Reverse | Parking brake | Handbrake |
| Barrel | Choke/venturi | Parking light | Sidelight |
| Block | Chock | Pinging | Pinking |
| Box-end wrench | Ring spanner | Piston pin or wrist pin | Gudgeon pin |
| Bushing | Bush | Piston pin or wrist pin | Small end, little end |
| Carburetor | Carburettor | Pitman arm | Drop arm |
| Center | Centre | Power brake booster | Servo unit |
| Coast | Freewheel | Primary shoe (of brake) | Leading shoe (of brake) |
| Color | Colour | Prussian blue | Engineer's blue |
| Convertible | Drop head coupe | Pry | Prise (force apart) |
| Cotter pin | Split pin | Prybar | Lever |
| Counterclockwise | Anti-clockwise | Prying | Levering |
| Countershaft (of gearbox) | Layshaft | Quarter window | Quarterlight |
| Dashboard | Facia | Recap | Retread |
| Denatured alcohol | Methylated spirit | Release cylinder | Slave cylinder |
| Dome lamp | Interior light | Repair shop | Garage |
| Driveaxle | Driveshaft | Replacement | Renewal |
| Driveshaft | Propeller shaft | Ring gear (of differential) | Crownwheel |
| Fender | Wing/mudguard | Rocker panel (beneath doors) | Sill panel (beneath doors) |
| Firewall | Bulkhead | Rod bearing | Big-end bearing |
| Flashlight | Torch | Rotor/disk | Disc (brake) |
| Float bowl | Float chamber | Secondary shoe (of brake) | Trailing shoe (of brake) |
| Floor jack | Trolley jack | Sedan | Saloon |
| Freeway, turnpike etc | Motorway | Setscrew, Allen screw | Grub screw |
| Freeze plug | Core plug | Shock absorber, shock | Damper |
| Frozen | Seized | Snap-ring | Circlip |
| Gas tank | Petrol tank | Soft top | Hood |
| Gasoline (gas) | Petrol | Spacer | Distance piece |
| Gearshift | Gearchange | Spare tire | Spare wheel |
| Generator (DC) | Dynamo | Spark plug wires | HT leads |
| Ground (electrical) | Earth | Spindle arm | Steering arm |
| Header | Exhaust manifold | Stabilizer or sway bar | Anti-roll bar |
| Heat riser | Hot spot | Station wagon | Estate car |
| High | Top gear | Stumbles | Hesitates |
| Hood (engine cover) | Bonnet | Tang or lock | Tab washer |
| Installation | Refitting | Throw-out bearing | Thrust bearing |
| Intake | Inlet | Tie-rod or connecting rod (of steering) | Trackrod |
| Jackstands | Axle stands | Tire | Tyre |
| Jumper cable | Jump lead | Transmission | Gearbox |
| Keeper | Collet | Troubleshooting | Fault finding/diagnosis |
| Kerosene | Paraffin | Trunk | Boot (luggage compartment) |
| Knock pin | Roll pin | Turn signal | Indicator |
| Lash | Clearance | TV (throttle valve) cable | Kickdown cable |
| Lash | Free-play | Unpublicized | Unpublicised |
| Latch | Catch | Valve cover | Rocker cover |
| Latches | Locks | Valve lifter | Tappet |
| License plate | Number plate | Valve lifter or tappet | Cam follower or tappet |
| Light | Lamp | Vapor | Vapour |
| Lock (for valve spring retainer) | Split cotter (for valve spring cap) | Vise | Vice |
| Lopes | Hunts | Wheel cover | Roadwheel trim |
| Lug nut/bolt | Wheel nut/bolt | Whole drive line | Transmission |
| Metal chips or debris | Swarf | Windshield | Windscreen |
| Misses | Misfires | Wrench | Spanner |

REF•4 Buying spare parts

Spare parts are available from many sources, including maker's appointed garages, accessory shops, and motor factors. To be sure of obtaining the correct parts, it will sometimes be necessary to quote the vehicle identification number. If possible, it can also be useful to take the old parts along for positive identification. Items such as starter motors and alternators may be available under a service exchange scheme - any parts returned should be clean.

Our advice regarding spare parts is as follows.

Officially appointed garages

This is the best source of parts which are peculiar to your car, and which are not otherwise generally available (eg, badges, interior trim, certain body panels, etc). It is also the only place at which you should buy parts if the vehicle is still under warranty.

Accessory shops

These are very good places to buy materials and components needed for the

maintenance of your car (oil, air and fuel filters, light bulbs, drivebelts, greases, brake pads, touch-up paint, etc). Components of this nature sold by a reputable shop are usually of the same standard as those used by the car manufacturer.

Besides components, these shops also sell tools and general accessories, usually have convenient opening hours, charge lower prices, and can often be found close to home. Some accessory shops have parts counters where components needed for almost any repair job can be purchased or ordered.

Motor factors

Good factors will stock all the more important components which wear out comparatively quickly, and can sometimes supply individual components needed for the overhaul of a larger assembly (eg, brake seals and hydraulic parts, bearing shells, pistons, valves). They may also handle work such as cylinder block reboring, crankshaft regrinding, etc.

Tyre and exhaust specialists

These outlets may be independent, or members of a local or national chain. They frequently offer competitive prices when compared with a main dealer or local garage, but it will pay to obtain several quotes before making a decision. When researching prices, also ask what "extras" may be added - for instance fitting a new valve and balancing the wheel are both commonly charged on top of the price of a new tyre.

Other sources

Beware of parts or materials obtained from market stalls, car boot sales or similar outlets. Such items are not invariably sub-standard, but there is little chance of compensation if they do prove unsatisfactory. In the case of safety-critical components such as brake pads, there is the risk of financial loss, and also of an accident causing injury or death.

Second-hand parts or assemblies obtained from a car breaker can be a good buy in some circumstances, but this sort of purchase is best made by the experienced DIY mechanic.

Vehicle identification

Modifications are a continuing and unpublicised process in vehicle manufacture, quite apart from major model changes. Spare parts manuals and lists are compiled upon a numerical basis, the individual vehicle identification numbers being essential to correct identification of the part concerned.

When ordering spare parts, always give as much information as possible. Quote the car model, year of manufacture and registration, chassis and engine numbers as appropriate.

The *Vehicle Identification Number (VIN)* plate is attached to the base of the driver's door pillar left-hand wing valance and is visible once the bonnet has been opened. The vehicle identification (chassis) number is also stamped onto a plate located inside the windscreen and may also be stamped onto the right-hand inner wing panel in the engine compartment (see illustrations).

The *trim code and paint code* are also stamped onto the VIN plate.

The *engine number* is stamped onto the right-hand side of the cylinder block, next to the distributor (see illustration).

The *automatic transmission number* is stamped onto a metal label attached to the left-hand side of the transmission housing, just above the sump (see illustration).



The VIN is stamped on the right inner wing panel of the engine compartment



The VIN is also present on the left side of the dashboard



The engine identification number is stamped on the right side of the engine block just behind the distributor



The transmission identification number is located on the left side of the transmission housing just above the sump

Whenever servicing, repair or overhaul work is carried out on the car or its components, it is necessary to observe the following procedures and instructions. This will assist in carrying out the operation efficiently and to a professional standard of workmanship.

Joint mating faces and gaskets

When separating components at their mating faces, never insert screwdrivers or similar implements into the joint between the faces in order to prise them apart. This can cause severe damage which results in oil leaks, coolant leaks, etc upon reassembly. Separation is usually achieved by tapping along the joint with a soft-faced hammer in order to break the seal. However, note that this method may not be suitable where dowels are used for component location.

Where a gasket is used between the mating faces of two components, ensure that it is renewed on reassembly, and fit it dry unless otherwise stated in the repair procedure. Make sure that the mating faces are clean and dry, with all traces of old gasket removed. When cleaning a joint face, use a tool which is not likely to score or damage the face, and remove any burrs or nicks with an oilstone or fine file.

Make sure that tapped holes are cleaned with a pipe cleaner, and keep them free of jointing compound, if this is being used, unless specifically instructed otherwise.

Ensure that all orifices, channels or pipes are clear, and blow through them, preferably using compressed air.

Oil seals

Oil seals can be removed by levering them out with a wide flat-bladed screwdriver or similar tool. Alternatively, a number of self-tapping screws may be screwed into the seal, and these used as a purchase for pliers or similar in order to pull the seal free.

Whenever an oil seal is removed from its working location, either individually or as part of an assembly, it should be renewed.

The very fine sealing lip of the seal is easily damaged, and will not seal if the surface it contacts is not completely clean and free from scratches, nicks or grooves. If the original sealing surface of the component cannot be restored, and the manufacturer has not made provision for slight relocation of the seal relative to the sealing surface, the component should be renewed.

Protect the lips of the seal from any surface which may damage them in the course of fitting. Use tape or a conical sleeve where possible. Lubricate the seal lips with oil before fitting and, on dual-lipped seals, fill the space between the lips with grease.

Unless otherwise stated, oil seals must be fitted with their sealing lips toward the lubricant to be sealed.

Use a tubular drift or block of wood of the appropriate size to install the seal and, if the seal housing is shouldered, drive the seal down to the shoulder. If the seal housing is

unshouldered, the seal should be fitted with its face flush with the housing top face (unless otherwise instructed).

Screw threads and fastenings

Seized nuts, bolts and screws are quite a common occurrence where corrosion has set in, and the use of penetrating oil or releasing fluid will often overcome this problem if the offending item is soaked for a while before attempting to release it. The use of an impact driver may also provide a means of releasing such stubborn fastening devices, when used in conjunction with the appropriate screwdriver bit or socket. If none of these methods works, it may be necessary to resort to the careful application of heat, or the use of a hacksaw or nut splitter device.

Studs are usually removed by locking two nuts together on the threaded part, and then using a spanner on the lower nut to unscrew the stud. Studs or bolts which have broken off below the surface of the component in which they are mounted can sometimes be removed using a stud extractor. Always ensure that a blind tapped hole is completely free from oil, grease, water or other fluid before installing the bolt or stud. Failure to do this could cause the housing to crack due to the hydraulic action of the bolt or stud as it is screwed in.

When tightening a castellated nut to accept a split pin, tighten the nut to the specified torque, where applicable, and then tighten further to the next split pin hole. Never slacken the nut to align the split pin hole, unless stated in the repair procedure.

When checking or retightening a nut or bolt to a specified torque setting, slacken the nut or bolt by a quarter of a turn, and then retighten to the specified setting. However, this should not be attempted where angular tightening has been used.

For some screw fastenings, notably cylinder head bolts or nuts, torque wrench settings are no longer specified for the latter stages of tightening, "angle-tightening" being called up instead. Typically, a fairly low torque wrench setting will be applied to the bolts/nuts in the correct sequence, followed by one or more stages of tightening through specified angles.

Locknuts, locktabs and washers

Any fastening which will rotate against a component or housing during tightening should always have a washer between it and the relevant component or housing.

Spring or split washers should always be renewed when they are used to lock a critical component such as a big-end bearing retaining bolt or nut. Locktabs which are folded over to retain a nut or bolt should always be renewed.

Self-locking nuts can be re-used in non-critical areas, providing resistance can be felt when the locking portion passes over the bolt or stud thread. However, it should be noted that self-locking stiffnuts tend to lose their

effectiveness after long periods of use, and should be renewed as a matter of course.

Split pins must always be replaced with new ones of the correct size for the hole.

When thread-locking compound is found on the threads of a fastener which is to be re-used, it should be cleaned off with a wire brush and solvent, and fresh compound applied on reassembly.

Special tools

Some repair procedures in this manual entail the use of special tools such as a press, two or three-legged pullers, spring compressors, etc. Wherever possible, suitable readily-available alternatives to the manufacturer's special tools are described, and are shown in use. In some instances, where no alternative is possible, it has been necessary to resort to the use of a manufacturer's tool, and this has been done for reasons of safety as well as the efficient completion of the repair operation. Unless you are highly-skilled and have a thorough understanding of the procedures described, never attempt to bypass the use of any special tool when the procedure described specifies its use. Not only is there a very great risk of personal injury, but expensive damage could be caused to the components involved.

Environmental considerations

When disposing of used engine oil, brake fluid, antifreeze, etc, give due consideration to any detrimental environmental effects. Do not, for instance, pour any of the above liquids down drains into the general sewage system, or onto the ground to soak away. Many local council refuse tips provide a facility for waste oil disposal, as do some garages. If none of these facilities are available, consult your local Environmental Health Department, or the National Rivers Authority, for further advice.

With the universal tightening-up of legislation regarding the emission of environmentally-harmful substances from motor vehicles, most current vehicles have tamperproof devices fitted to the main adjustment points of the fuel system. These devices are primarily designed to prevent unqualified persons from adjusting the fuel/air mixture, with the chance of a consequent increase in toxic emissions. If such devices are encountered during servicing or overhaul, they should, wherever possible, be renewed or refitted in accordance with the vehicle manufacturer's requirements or current legislation.



Note: It is antisocial and illegal to dump oil down the drain. To find the location of your local oil recycling bank, call this number free.

Introduction

A selection of good tools is a fundamental requirement for anyone contemplating the maintenance and repair of a motor vehicle. For the owner who does not possess any, their purchase will prove a considerable expense, offsetting some of the savings made by doing-it-yourself. However, provided that the tools purchased meet the relevant national safety standards and are of good quality, they will last for many years and prove an extremely worthwhile investment.

To help the average owner to decide which tools are needed to carry out the various tasks detailed in this manual, we have compiled three lists of tools under the following headings: *Maintenance and minor repair*, *Repair and overhaul*, and *Special*. Newcomers to practical mechanics should start off with the *Maintenance and minor repair* tool kit, and confine themselves to the simpler jobs around the vehicle. Then, as confidence and experience grow, more difficult tasks can be undertaken, with extra tools being purchased as, and when, they are needed. In this way, a *Maintenance and minor repair* tool kit can be built up into a *Repair and overhaul* tool kit over a considerable period of time, without any major cash outlays. The experienced do-it-yourselfer will have a tool kit good enough for most repair and overhaul procedures, and will add tools from the *Special* category when it is felt that the expense is justified by the amount of use to which these tools will be put.

Maintenance and minor repair tool kit

The tools given in this list should be considered as a minimum requirement if routine maintenance, servicing and minor repair operations are to be undertaken. We recommend the purchase of combination spanners (ring one end, open-ended the other); although more expensive than open-ended ones, they do give the advantages of both types of spanner.

- Combination spanners:*
 - Metric - 8 to 19 mm inclusive*
 - Adjustable spanner - 35 mm jaw (approx.)*
- Spark plug spanner (with rubber insert) - petrol models*
- Spark plug gap adjustment tool - petrol models*
- Set of feeler blades*
- Brake bleed nipple spanner*
- Screwdrivers:*
 - Flat blade - 100 mm long x 6 mm dia*
 - Cross blade - 100 mm long x 6 mm dia*
- Combination pliers*
- Hacksaw (junior)*
- Tyre pump*
- Tyre pressure gauge*
- Oil can*
- Oil filter removal tool*
- Fine emery cloth*
- Wire brush (small)*
- Funnel (medium size)*

Repair and overhaul tool kit

These tools are virtually essential for anyone undertaking any major repairs to a motor vehicle, and are additional to those given in the *Maintenance and minor repair* list. Included in this list is a comprehensive set of sockets. Although these are expensive, they will be found invaluable as they are so versatile - particularly if various drives are included in the set. We recommend the half-inch square-drive type, as this can be used with most proprietary torque wrenches.

The tools in this list will sometimes need to be supplemented by tools from the *Special* list:

- Sockets (or box spanners) to cover range in previous list (including Torx sockets)*
- Reversible ratchet drive (for use with sockets)*
- Extension piece, 250 mm (for use with sockets)*
- Universal joint (for use with sockets)*
- Torque wrench (for use with sockets)*
- Self-locking grips*
- Ball pein hammer*
- Soft-faced mallet (plastic/aluminium or rubber)*
- Screwdrivers:*
 - Flat blade - long & sturdy, short (chubby), and narrow (electrician's) types*
 - Cross blade - Long & sturdy, and short (chubby) types*
- Pliers:*
 - Long-nosed*
 - Side cutters (electrician's)*
 - Circlip (internal and external)*
- Cold chisel - 25 mm*
- Scriber*
- Scrapper*
- Centre-punch*
- Pin punch*
- Hacksaw*
- Brake hose clamp*
- Brake/clutch bleeding kit*
- Selection of twist drills*
- Steel rule/straight-edge*
- Allen keys (inc. splined/Torx type)*
- Selection of files*
- Wire brush*
- Axle stands*
- Jack (strong trolley or hydraulic type)*
- Light with extension lead*



Sockets and reversible ratchet drive



Valve spring compressor



Spline bit set



Piston ring compressor



Clutch plate alignment set

Special tools

The tools in this list are those which are not used regularly, are expensive to buy, or which need to be used in accordance with their manufacturers' instructions. Unless relatively difficult mechanical jobs are undertaken frequently, it will not be economic to buy many of these tools. Where this is the case, you could consider clubbing together with friends (or joining a motorists' club) to make a joint purchase, or borrowing the tools against a deposit from a local garage or tool hire specialist. It is worth noting that many of the larger DIY superstores now carry a large range of special tools for hire at modest rates.

The following list contains only those tools and instruments freely available to the public, and not those special tools produced by the vehicle manufacturer specifically for its dealer network. You will find occasional references to these manufacturers' special tools in the text of this manual. Generally, an alternative method of doing the job without the vehicle manufacturers' special tool is given. However, sometimes there is no alternative to using them. Where this is the case and the relevant tool cannot be bought or borrowed, you will have to entrust the work to a dealer.

- Valve spring compressor
- Valve grinding tool
- Piston ring compressor
- Piston ring removal/installation tool
- Cylinder bore hone
- Balljoint separator
- Coil spring compressors (where applicable)
- Two/three-legged hub and bearing puller
- Impact screwdriver
- Micrometer and/or vernier calipers
- Dial gauge
- Stroboscopic timing light
- Dwell angle meter/tachometer
- Universal electrical multi-meter
- Cylinder compression gauge
- Hand-operated vacuum pump and gauge
- Clutch plate alignment set
- Brake shoe steady spring cup removal tool
- Bush and bearing removal/installation set
- Stud extractors
- Tap and die set
- Lifting tackle
- Trolley jack



Stroboscopic timing light

Buying tools

Reputable motor accessory shops and superstores often offer excellent quality tools at discount prices, so it pays to shop around.

Remember, you don't have to buy the most expensive items on the shelf, but it is always advisable to steer clear of the very cheap tools. Beware of 'bargains' offered on market stalls or at car boot sales. There are plenty of good tools around at reasonable prices, but always aim to purchase items which meet the relevant national safety standards. If in doubt, ask the proprietor or manager of the shop for advice before making a purchase.

Care and maintenance of tools

Having purchased a reasonable tool kit, it is necessary to keep the tools in a clean and serviceable condition. After use, always wipe off any dirt, grease and metal particles using a clean, dry cloth, before putting the tools away. Never leave them lying around after they have been used. A simple tool rack on the garage or workshop wall for items such as screwdrivers and pliers is a good idea. Store all normal spanners and sockets in a metal box. Any measuring instruments, gauges, meters, etc, must be carefully stored where they cannot be damaged or become rusty.

Take a little care when tools are used. Hammer heads inevitably become marked, and screwdrivers lose the keen edge on their blades from time to time. A little timely attention with emery cloth or a file will soon restore items like this to a good finish.



Micrometer set

Working facilities

Not to be forgotten when discussing tools is the workshop itself. If anything more than routine maintenance is to be carried out, a suitable working area becomes essential.

It is appreciated that many an owner-mechanic is forced by circumstances to remove an engine or similar item without the benefit of a garage or workshop. Having done this, any repairs should always be done under the cover of a roof.

Wherever possible, any dismantling should be done on a clean, flat workbench or table at a suitable working height.

Any workbench needs a vice; one with a jaw opening of 100 mm is suitable for most jobs. As mentioned previously, some clean dry storage space is also required for tools, as well as for any lubricants, cleaning fluids, touch-up paints etc, which become necessary.

Another item which may be required, and which has a much more general usage, is an electric drill with a chuck capacity of at least 8 mm. This, together with a good range of twist drills, is virtually essential for fitting accessories.

Last, but not least, always keep a supply of old newspapers and clean, lint-free rags available, and try to keep any working area as clean as possible.



Dial test indicator ("dial gauge")



Compression tester



Stud extractor set

REF•8 MOT test checks

This is a guide to getting your vehicle through the MOT test. Obviously it will not be possible to examine the vehicle to the same standard as the professional MOT tester. However, working through the following checks will enable you to identify any problem areas before submitting the vehicle for the test.

Where a testable component is in borderline condition, the tester has discretion in deciding whether to pass or fail it. The basis of such discretion is whether the tester would be happy for a close relative or friend to use the vehicle with the component in that condition. If the vehicle presented is clean and evidently well cared for, the tester may be more inclined to pass a borderline component than if the vehicle is scruffy and apparently neglected.

It has only been possible to summarise the test requirements here, based on the regulations in force at the time of printing. Test standards are becoming increasingly stringent, although there are some exemptions for older vehicles. For full details obtain a copy of the Haynes publication *Pass the MOT!* (available from stockists of Haynes manuals).

An assistant will be needed to help carry out some of these checks.



The checks have been sub-divided into four categories, as follows:

1 Checks carried out
FROM THE DRIVER'S SEAT

2 Checks carried out
WITH THE VEHICLE ON THE GROUND

3 Checks carried out
WITH THE VEHICLE RAISED AND THE WHEELS FREE TO TURN

4 Checks carried out on
YOUR VEHICLE'S EXHAUST EMISSION SYSTEM

1 Checks carried out
FROM THE DRIVER'S SEAT

Handbrake


Test the operation of the handbrake. Excessive travel (too many clicks) indicates incorrect brake or cable adjustment.

Check that the handbrake cannot be released by tapping the lever sideways. Check the security of the lever mountings.



Footbrake

Depress the brake pedal and check that it does not creep down to the floor, indicating a master cylinder fault. Release the pedal, wait a few seconds, then depress it again. If the pedal travels nearly to the floor before firm resistance is felt, brake adjustment or repair is necessary. If the pedal feels spongy, there is air in the hydraulic system which must be removed by bleeding.

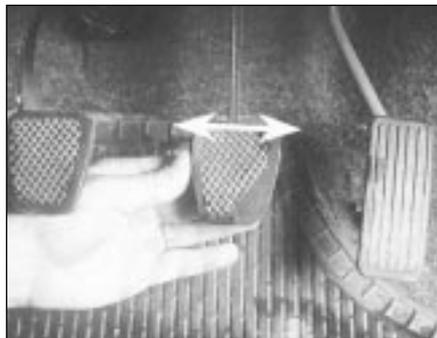

Check that the brake pedal is secure and in good condition. Check also for signs of fluid leaks on the pedal, floor or carpets, which would indicate failed seals in the brake master cylinder.

Check the servo unit (when applicable) by operating the brake pedal several times, then keeping the pedal depressed and starting the engine. As the engine starts, the pedal will move down slightly. If not, the vacuum hose or the servo itself may be faulty.

Steering wheel and column

Examine the steering wheel for fractures or looseness of the hub, spokes or rim.

Move the steering wheel from side to side and then up and down. Check that the steering wheel is not loose on the column, indicating wear or a loose retaining nut. Continue moving the steering wheel as before, but also turn it slightly from left to right.


Check that the steering wheel is not loose on the column, and that there is no abnormal



movement of the steering wheel, indicating wear in the column support bearings or couplings.

Windscreen and mirrors

The windscreen must be free of cracks or other significant damage within the driver's field of view. (Small stone chips are acceptable.) Rear view mirrors must be secure, intact, and capable of being adjusted.

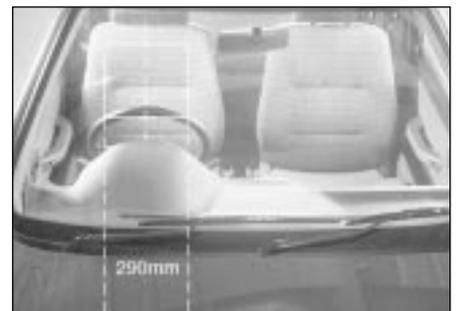



Seat belts and seats

Note: The following checks are applicable to all seat belts, front and rear.

- Examine the webbing of all the belts (including rear belts if fitted) for cuts, serious fraying or deterioration. Fasten and unfasten each belt to check the buckles. If applicable, check the retracting mechanism. Check the security of all seat belt mountings accessible from inside the vehicle.
- The front seats themselves must be securely attached and the backrests must lock in the upright position.

Doors

- Both front doors must be able to be opened and closed from outside and inside, and must latch securely when closed.


2 Checks carried out WITH THE VEHICLE ON THE GROUND

Vehicle identification

- Number plates must be in good condition, secure and legible, with letters and numbers correctly spaced – spacing at (A) should be twice that at (B).



- The VIN plate and/or homologation plate must be legible.

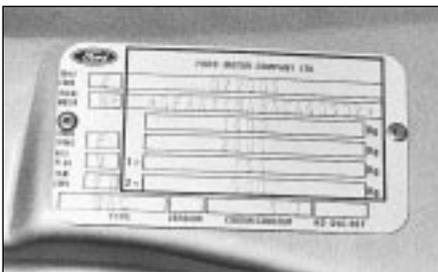

Electrical equipment

- Switch on the ignition and check the operation of the horn.
- Check the windscreen washers and wipers, examining the wiper blades; renew damaged or perished blades. Also check the operation of the stop-lights.




- Check the operation of the sidelights and number plate lights. The lenses and reflectors must be secure, clean and undamaged.
- Check the operation and alignment of the headlights. The headlight reflectors must not be tarnished and the lenses must be undamaged.
- Switch on the ignition and check the operation of the direction indicators (including the instrument panel tell-tale) and the hazard warning lights. Operation of the sidelights and stop-lights must not affect the indicators - if it does, the cause is usually a bad earth at the rear light cluster.
- Check the operation of the rear foglight(s), including the warning light on the instrument panel or in the switch.

Footbrake

- Examine the master cylinder, brake pipes and servo unit for leaks, loose mountings, corrosion or other damage.



- The fluid reservoir must be secure and the fluid level must be between the upper (A) and lower (B) markings.

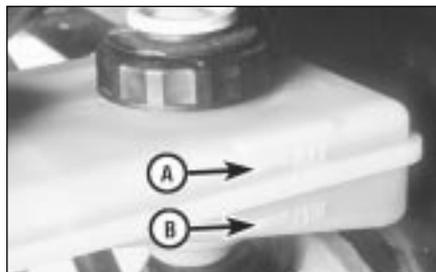

- Inspect both front brake flexible hoses for cracks or deterioration of the rubber. Turn the steering from lock to lock, and ensure that the hoses do not contact the wheel, tyre, or any part of the steering or suspension mechanism. With the brake pedal firmly depressed, check the hoses for bulges or leaks under pressure.



Steering and suspension

- Have your assistant turn the steering wheel from side to side slightly, up to the point where the steering gear just begins to transmit this movement to the roadwheels. Check for excessive free play between the steering wheel and the steering gear, indicating wear or insecurity of the steering column joints, the column-to-steering gear coupling, or the steering gear itself.
- Have your assistant turn the steering wheel more vigorously in each direction, so that the roadwheels just begin to turn. As this is done, examine all the steering joints, linkages, fittings and attachments. Renew any component that shows signs of wear or damage. On vehicles with power steering, check the security and condition of the steering pump, drivebelt and hoses.
- Check that the vehicle is standing level, and at approximately the correct ride height.

Shock absorbers

- Depress each corner of the vehicle in turn, then release it. The vehicle should rise and then settle in its normal position. If the vehicle continues to rise and fall, the shock absorber is defective. A shock absorber which has seized will also cause the vehicle to fail.



Exhaust system

□ Start the engine. With your assistant holding a rag over the tailpipe, check the entire system for leaks. Repair or renew leaking sections.



3 Checks carried out WITH THE VEHICLE RAISED AND THE WHEELS FREE TO TURN

Jack up the front and rear of the vehicle, and securely support it on axle stands. Position the stands clear of the suspension assemblies. Ensure that the wheels are clear of the ground and that the steering can be turned from lock to lock.

Steering mechanism

□ Have your assistant turn the steering from lock to lock. Check that the steering turns smoothly, and that no part of the steering mechanism, including a wheel or tyre, fouls any brake hose or pipe or any part of the body structure.

□ Examine the steering rack rubber gaiters for damage or insecurity of the retaining clips. If power steering is fitted, check for signs of damage or leakage of the fluid hoses, pipes or connections. Also check for excessive stiffness or binding of the steering, a missing split pin or locking device, or severe corrosion of the body structure within 30 cm of any steering component attachment point.



Front and rear suspension and wheel bearings

□ Starting at the front right-hand side, grasp the roadwheel at the 3 o'clock and 9 o'clock positions and shake it vigorously. Check for free play or insecurity at the wheel bearings, suspension balljoints, or suspension mountings, pivots and attachments.

□ Now grasp the wheel at the 12 o'clock and 6 o'clock positions and repeat the previous inspection. Spin the wheel, and check for roughness or tightness of the front wheel bearing.



□ If excess free play is suspected at a component pivot point, this can be confirmed by using a large screwdriver or similar tool and levering between the mounting and the component attachment. This will confirm whether the wear is in the pivot bush, its retaining bolt, or in the mounting itself (the bolt holes can often become elongated).



□ Carry out all the above checks at the other front wheel, and then at both rear wheels.

Springs and shock absorbers

□ Examine the suspension struts (when applicable) for serious fluid leakage, corrosion, or damage to the casing. Also check the security of the mounting points.

□ If coil springs are fitted, check that the spring ends locate in their seats, and that the spring is not corroded, cracked or broken.

□ If leaf springs are fitted, check that all leaves are intact, that the axle is securely attached to each spring, and that there is no deterioration of the spring eye mountings, bushes, and shackles.

□ The same general checks apply to vehicles fitted with other suspension types, such as torsion bars, hydraulic displacer units, etc. Ensure that all mountings and attachments are secure, that there are no signs of excessive wear, corrosion or damage, and (on hydraulic types) that there are no fluid leaks or damaged pipes.

□ Inspect the shock absorbers for signs of serious fluid leakage. Check for wear of the mounting bushes or attachments, or damage to the body of the unit.


Driveshafts (fwd vehicles only)

□ Rotate each front wheel in turn and inspect the constant velocity joint gaiters for splits or damage. Also check that each driveshaft is straight and undamaged.



Braking system


□ If possible without dismantling, check brake pad wear and disc condition. Ensure that the friction lining material has not worn excessively, (A) and that the discs are not fractured, pitted, scored or badly worn (B).

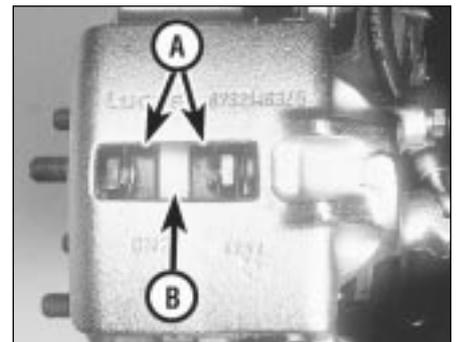

□ Examine all the rigid brake pipes underneath the vehicle, and the flexible hose(s) at the rear. Look for corrosion, chafing or insecurity of the pipes, and for signs of bulging under pressure, chafing, splits or deterioration of the flexible hoses.

□ Look for signs of fluid leaks at the brake calipers or on the brake backplates. Repair or renew leaking components.

□ Slowly spin each wheel, while your assistant depresses and releases the footbrake. Ensure that each brake is operating and does not bind when the pedal is released.

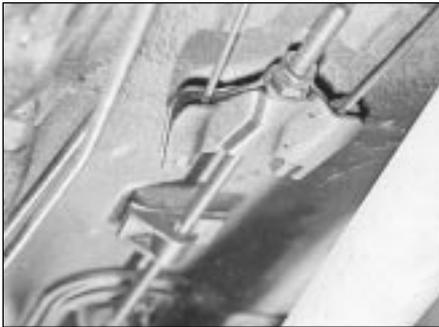

- Examine the handbrake mechanism, checking for frayed or broken cables, excessive corrosion, or wear or insecurity of the linkage. Check that the mechanism works on each relevant wheel, and releases fully, without binding.
- It is not possible to test brake efficiency without special equipment, but a road test can be carried out later to check that the vehicle pulls up in a straight line.


Fuel and exhaust systems

- Inspect the fuel tank (including the filler cap), fuel pipes, hoses and unions. All components must be secure and free from leaks.
- Examine the exhaust system over its entire length, checking for any damaged, broken or missing mountings, security of the retaining clamps and rust or corrosion.



Wheels and tyres

- Examine the sidewalls and tread area of each tyre in turn. Check for cuts, tears, lumps, bulges, separation of the tread, and exposure of the ply or cord due to wear or damage. Check that the tyre bead is correctly seated on the wheel rim, that the valve is sound and

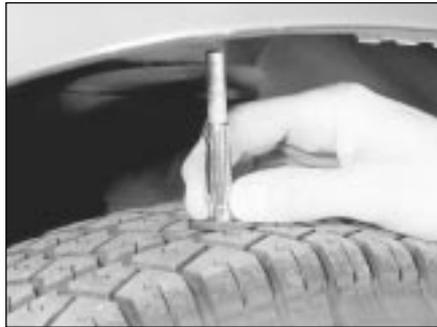

- properly seated, and that the wheel is not distorted or damaged.
- Check that the tyres are of the correct size for the vehicle, that they are of the same size and type on each axle, and that the pressures are correct.
- Check the tyre tread depth. The legal minimum at the time of writing is 1.6 mm over at least three-quarters of the tread width. Abnormal tread wear may indicate incorrect front wheel alignment.

Body corrosion

- Check the condition of the entire vehicle structure for signs of corrosion in load-bearing areas. (These include chassis box sections, side sills, cross-members, pillars, and all suspension, steering, braking system and seat belt mountings and anchorages.) Any corrosion which has seriously reduced the thickness of a load-bearing area is likely to cause the vehicle to fail. In this case professional repairs are likely to be needed.
- Damage or corrosion which causes sharp or otherwise dangerous edges to be exposed will also cause the vehicle to fail.

4 Checks carried out on YOUR VEHICLE'S EXHAUST EMISSION SYSTEM

Petrol models

- Have the engine at normal operating temperature, and make sure that it is in good tune (ignition system in good order, air filter element clean, etc).
- Before any measurements are carried out, raise the engine speed to around 2500 rpm, and hold it at this speed for 20 seconds. Allow

the engine speed to return to idle, and watch for smoke emissions from the exhaust tailpipe. If the idle speed is obviously much too high, or if dense blue or clearly-visible black smoke comes from the tailpipe for more than 5 seconds, the vehicle will fail. As a rule of thumb, blue smoke signifies oil being burnt (engine wear) while black smoke signifies unburnt fuel (dirty air cleaner element, or other carburettor or fuel system fault).

- An exhaust gas analyser capable of measuring carbon monoxide (CO) and hydrocarbons (HC) is now needed. If such an instrument cannot be hired or borrowed, a local garage may agree to perform the check for a small fee.

CO emissions (mixture)

- At the time of writing, the maximum CO level at idle is 3.5% for vehicles first used after August 1986 and 4.5% for older vehicles. From January 1996 a much tighter limit (around 0.5%) applies to catalyst-equipped vehicles first used from August 1992. If the CO level cannot be reduced far enough to pass the test (and the fuel and ignition systems are otherwise in good condition) then the carburettor is badly worn, or there is some problem in the fuel injection system or catalytic converter (as applicable).

HC emissions

- With the CO emissions within limits, HC emissions must be no more than 1200 ppm (parts per million). If the vehicle fails this test at idle, it can be re-tested at around 2000 rpm; if the HC level is then 1200 ppm or less, this counts as a pass.
- Excessive HC emissions can be caused by oil being burnt, but they are more likely to be due to unburnt fuel.

Diesel models

- The only emission test applicable to Diesel engines is the measuring of exhaust smoke density. The test involves accelerating the engine several times to its maximum unloaded speed.

Note: *It is of the utmost importance that the engine timing belt is in good condition before the test is carried out.*

- Excessive smoke can be caused by a dirty air cleaner element. Otherwise, professional advice may be needed to find the cause.

Engine1

- Engine backfires
- Engine diesels (continues to run) after switching off
- Engine hard to start when cold
- Engine hard to start when hot
- Engine lacks power
- Engine lopes while idling or idles erratically
- Engine misses at idle speed
- Engine misses throughout driving speed range
- Engine rattles at start-up
- Engine rotates but will not start
- Engine runs with oil pressure light on
- Engine stalls
- Engine starts but stops immediately
- Engine stumbles on acceleration
- Engine surges while holding accelerator steady
- Engine will not rotate when attempting to start¹
- Oil puddle under engine
- Pinking or knocking engine sounds during acceleration or uphill
- Starter motor noisy or excessively rough in engagement

Fuel system2

- Excessive fuel consumption
- Fuel leakage and/or fuel odour

Cooling system3

- Coolant loss
- External coolant leakage
- Internal coolant leakage
- Overcooling
- Overheating
- Poor coolant circulation

Automatic transmission4

- Engine will start in gears other than Park or Neutral
- Fluid leakage
- Shift cable problems
- Transmission fluid brown or has a burned smell
- Transmission slips, shifts roughly, is noisy or has no drive
- in forward or reverse gears
- Transmission will not downshift with accelerator pedal pressed to the floor

Brakes5

- Brake pedal feels spongy when depressed
- Brake pedal travels to the floor with little resistance
- Brake roughness or chatter (pedal pulsates)
- Dragging brakes
- Excessive brake pedal travel
- Excessive pedal effort required to stop vehicle
- Grabbing or uneven braking action
- Noise (high-pitched squeal when the brakes are applied)
- Handbrake does not hold
- Vehicle pulls to one side during braking

Suspension and steering systems6

- Abnormal noise at the front end
- Abnormal or excessive tyre wear
- Cupped tyres
- Erratic steering when braking
- Excessive pitching and/or rolling around corners or during braking
- Excessive play or looseness in steering system
- Excessive tyre wear on inside edge
- Excessive tyre wear on outside edge
- Hard steering
- Poor returnability of steering to centre
- Rattling or clicking noise in rack-and-pinion
- Shimmy, shake or vibration
- Suspension bottoms
- Tyre tread worn in one place
- Vehicle pulls to one side
- Wander or poor steering stability
- Wheel makes a "thumping" noise

Electrical system7

- Battery will not hold a charge
- Discharge warning light fails to come on when key is turned on
- Discharge warning light fails to go out

Introduction

This Section provides an easy reference guide to the more common problems which may occur during the operation of your vehicle. These problems and their possible causes are grouped under headings denoting various components or systems, such as Engine, Cooling system, etc. They also refer you to the Chapter and/or Section which deals with the problem.

Remember that successful troubleshooting is not a mysterious "black art" practised only by professional mechanics. It is simply the result of the right knowledge combined with an intelligent, systematic approach to the problem. Always work by a process of elimination, starting with the simplest solution and working through to the most

complex - and never overlook the obvious. Anyone can run the petrol tank dry or leave the lights on overnight, so don't assume that you are exempt from such oversights.

Finally, always establish a clear idea of why a problem has occurred and take steps to ensure that it doesn't happen again. If the electrical system fails because of a poor connection, check all other connections in the system to make sure that they don't fail as well. If a particular fuse continues to blow, find out why - don't just replace one fuse after another. Remember, failure of a small component can often be indicative of potential failure or incorrect functioning of a more important component or system.

1 Engine

Engine will not rotate when attempting to start

- Battery terminal connections loose or corroded (Chapter 1).
- Battery discharged or faulty (Chapter 1).
- Damaged left rear window harness shorting against glass rail inside door, causing battery to drain (Chapter 12).
- Automatic transmission not completely engaged in Park (Chapter 7).
- Broken, loose or disconnected wiring in the starting circuit (Chapters 5 and 12).
- Starter motor pinion jammed in flywheel ring gear (Chapter 5).
- Starter solenoid faulty (Chapter 5).
- Starter motor faulty (Chapter 5).
- Ignition switch faulty (Chapter 12).
- Starter pinion or flywheel teeth worn or broken (Chapter 5).
- Internal engine problem (Chapter 2B).
- Inertia switch activated (Chapter 12).
- Starter relay defective (Chapter 5).

Engine rotates but will not start

- Fuel tank empty.
- Battery discharged (engine rotates slowly) (Chapter 5).
- Battery terminal connections loose or corroded (Chapter 1).
- Leaking fuel injector(s), faulty fuel pump, pressure regulator, etc. (Chapter 4).
- Fuel not reaching fuel injection system (Chapter 4).
- Ignition components damp or damaged (Chapter 5).
- Fuel injector stuck open (Chapter 4).
- Worn, faulty or incorrectly gapped spark plugs (Chapter 1).
- Broken, loose or disconnected wiring in the starting circuit (Chapter 5).
- Loose distributor is changing ignition timing (Chapter 1).
- Broken, loose or disconnected wires at the ignition coil or faulty coil (Chapter 5).
- 1988 and 1989 models may have electrical connector damage between the fuel pump relay and the fuel pump (Chapter 12).
- Coolant temperature sensor shorting on bonnet liner (Chapter 11).
- Defective Mass Airflow (MAF) sensor (Chapter 6).

Engine hard to start when cold

- Battery discharged or low (Chapter 1).
- Fuel system malfunctioning (Chapter 4).
- Injector(s) leaking (Chapter 4).
- Distributor rotor carbon tracked (Chapter 5).
- Water enters the air cleaner housing near the left front wheel arch (Chapter 4).

Engine hard to start when hot

- Air filter clogged (Chapter 1).
- Fuel not reaching the fuel injection system (Chapter 4).
- Corroded battery connections, especially ground (Chapter 1).
- Fuel vaporises at fuel pump inlet. Refit dual fuel pumps (Chapter 4).
- Fuel vapours from charcoal canister enter intake during idle and cause idling, stalling and starting problems (Chapter 6).

Starter motor noisy or excessively rough in engagement

- Pinion or flywheel gear teeth worn or broken (Chapter 5).
- Starter motor mounting bolts loose or missing (Chapter 5).

Engine starts but stops immediately

- Loose or faulty electrical connections at distributor, coil or alternator (Chapter 5).
- Insufficient fuel reaching the fuel injector(s) (Chapters 1 and 4).
- Damaged fuel injection system speed sensors (Chapter 5).
- Faulty fuel injection relays (Chapter 5).
- Leaking threaded adapter on the EGR valve - where fitted (Chapter 6)

Oil puddle under engine

- Sump gasket and/or sump drain bolt seal leaking (Chapter 2).
- Oil pressure sending unit leaking (Chapter 2).
- Valve cover gaskets leaking (Chapter 2).
- Engine oil seals leaking (Chapter 2).
- Cylinder head rear plate gasket leaking (Chapter 2).
- Alternator mounting bolt threads leaking oil (Chapter 5).
- Oil cooler or oil cooler lines leaking (Chapter 3).

Engine misses while idling or idles erratically

- Vacuum leakage (Chapter 2).
- Air filter clogged (Chapter 1).
- Fuel pump not delivering sufficient fuel to the fuel injection system (Chapter 4).
- Leaking head gasket (Chapter 2).
- Timing belt/chain and/or sprockets worn (Chapter 2).
- Camshaft lobes worn (Chapter 2).
- EGR valve stuck open - where fitted (Chapter 6).

Engine misses at idle speed

- Spark plugs worn or not gapped properly (Chapter 1).
- Faulty spark plug leads (Chapter 1).
- Vacuum leaks (Chapter 1).
- Incorrect ignition timing (Chapter 5).
- Uneven or low compression (Chapter 2).
- Restricted EGR vacuum hose - where fitted (Chapter 6).

Engine misses throughout driving speed range

- Fuel filter clogged and/or impurities in the fuel system (Chapter 1).
- Low fuel output at the injectors (Chapter 4).
- Faulty or incorrectly gapped spark plugs (Chapter 1).
- Incorrect ignition timing (Chapter 5).
- Cracked distributor cap, disconnected distributor wires or damaged distributor components (Chapter 1).
- Leaking spark plug leads (Chapter 1).
- Faulty emission system components (Chapter 6).
- Low or uneven cylinder compression pressures (Chapter 2).
- Weak or faulty ignition system (Chapter 5).
- Vacuum leak in fuel injection system, intake manifold or vacuum hoses (Chapter 4).
- Crankshaft sensor teeth damaged or missing (see Chapter 12).
- Distributor installed incorrectly (see Chapter 5)

Engine stumbles on acceleration

- Spark plugs fouled (Chapter 1).
- Fuel injection system malfunctioning (Chapter 4).
- Fuel filter clogged (Chapters 1 and 4).
- Incorrect ignition timing (Chapter 5).
- Intake manifold air leak (Chapter 4).
- Collapsed or damaged fuel tank caused by blocked EVAP system - where fitted (see Chapter 6).

1 Engine (continued)

Engine surges while holding accelerator steady

- Intake air leak (Chapter 4).
- Fuel pump faulty (Chapter 4).
- Loose fuel injector harness connections (Chapters 4 and 6).
- Defective ECU (Chapter 6).

Pinking or knocking engine sounds during acceleration or uphill

- Incorrect grade of fuel.
- Distributor installed incorrectly (Chapter 5).
- Fuel injection system in need of adjustment (Chapter 4).
- Improper or damaged spark plugs or wires (Chapter 1).
- Worn or damaged distributor components (Chapter 5).
- Faulty emission system (Chapter 6).
- Vacuum leak (Chapter 4).
- Fuel rail feed (inlet) hose has hardened, resulting in knocking noise near dash (see Chapter 4).

Engine lacks power

- Incorrect ignition timing (Chapter 5).
- Excessive play in distributor shaft (Chapter 5).
- Worn rotor, distributor cap or wires (Chapters 1 and 5).
- Faulty or incorrectly gapped spark plugs (Chapter 1).
- Fuel injection system malfunctioning (Chapter 4).
- Faulty coil (Chapter 5).
- Brakes binding (Chapter 1).
- Automatic transmission fluid level incorrect (Chapter 1).
- Fuel filter clogged and/or impurities in the fuel system (Chapter 1).
- Emission control system not functioning properly (Chapter 6).
- Low or uneven cylinder compression pressures (Chapter 2).

Engine rattles at start-up

- Failure of upper timing chain tensioner (Chapter 2).

2 Fuel system

Excessive fuel consumption

- Dirty or clogged air filter element (Chapter 1).
- Incorrectly set ignition timing (Chapter 5).
- Emissions system not functioning properly (Chapter 6).
- Fuel injection internal parts worn or damaged (Chapter 4).
- Low tyre pressure or incorrect tyre size (Chapter 1).

Engine backfires

- Emissions system not functioning properly (Chapter 6).
- Ignition timing incorrect (Chapter 1).
- Faulty secondary ignition system (cracked spark plug insulator, faulty plug leads, distributor cap and/or rotor) (Chapters 1 and 5).
- Fuel injection system malfunctioning (Chapter 4).
- Vacuum leak at fuel injector(s), intake manifold or vacuum hoses (Chapter 4).

Engine stalls

- Idle speed incorrect (Chapter 1).
- Fuel filter clogged and/or water and impurities in the fuel system (Chapter 1).
- Distributor components damp or damaged (Chapter 5).
- Faulty emissions system components (Chapter 6).
- Faulty or incorrectly gapped spark plugs (Chapter 1).
- Faulty spark plug leads (Chapter 1).
- Vacuum leak in the fuel injection system, intake manifold or vacuum hoses (Chapter 4).

Engine runs with oil pressure light on

- Low oil level (Chapter 1).
- Idle rpm too low (Chapter 1).
- Short in wiring circuit (Chapter 12).
- Faulty oil pressure sending unit (Chapter 2).
- Worn engine bearings and/or oil pump (Chapter 2).

Engine diesels (continues to run) after switching off

- Idle speed too high (Chapter 4).
- Excessive engine operating temperature (Chapter 3).
- Incorrect fuel octane grade.

3 Cooling system

Overheating

- Insufficient coolant in system (Chapter 1).
- Water pump drivebelt defective or out of adjustment (Chapter 1).
- Radiator core blocked or grille restricted (Chapter 3).
- Thermostat faulty (Chapter 3).
- Radiator cap not maintaining proper pressure (Chapter 3).
- Ignition timing incorrect (Chapter 5).

Overcooling

- Faulty thermostat (Chapter 3).

External coolant leakage

- Deteriorated/damaged hoses; loose clamps (Chapters 1 and 3).
- Water pump seal defective (Chapters 1 and 3).
- Leakage from radiator core or manifold tank (Chapter 3).
- Engine drain or water jacket core plugs leaking (Chapter 2).
- Hoses behind water pump leaking (Chapter 3).

Internal coolant leakage

- Leaking cylinder head gasket (Chapter 2).
- Cracked cylinder bore or cylinder head (Chapter 2).

Coolant loss

- Too much coolant in system (Chapter 1).
- Coolant boiling away because of overheating (Chapter 3).
- Internal or external leakage (Chapter 3).
- Faulty radiator cap (Chapter 3).

Poor coolant circulation

- Inoperative water pump (Chapter 3).
- Restriction in cooling system (Chapters 1 and 3).
- Water pump drivebelt defective/out of adjustment (Chapter 1).
- Thermostat sticking (Chapter 3).

4 Automatic transmission

Note: Due to the complexity of the automatic transmission, it is difficult for the home mechanic to properly diagnose and service this component. For problems other than the following, the vehicle should be taken to a dealer or transmission workshop.

Fluid leakage

- Automatic transmission fluid is a deep red colour. Fluid leaks should not be confused with engine oil, which can easily be blown by air flow to the transmission.
- To pinpoint a leak, first remove all built-up dirt and grime from the transmission housing with degreasing agents and/or steam cleaning. Then drive the vehicle at low speeds so air flow will not blow the leak far from its source. Raise the vehicle and determine where the leak is coming from. Common areas of leakage are:
 - a) Sump pan (Chapters 1 and 7)
 - b) Dipstick/filler tube (see below)
 - c) Transmission fluid cooler lines (Chapter 7)
 - d) Speedometer sensor (Chapter 7)
- Make sure the dipstick is a tight fit inside the filler tube. If the seal at the top of the dipstick is worn or damaged, replace the seal or the dipstick. If fluid continues to leak from the top of the dipstick tube, inspect the breather, which is a plastic cap secured by a clip to the top of the extension housing. This breather can be plugged by the noise-deadening foam installed in the transmission tunnel, causing transmission fluid to leak from the top of the dipstick tube.

Transmission fluid brown or has a burned smell

- Transmission fluid burned (Chapter 1).

Shift cable problems

- Chapter 7 deals with adjusting the shift cable. Common problems which may be attributed to a poorly adjusted shift cable are:
 - a) Engine starting in gears other than Park or Neutral.
 - b) Indicator on shift lever pointing to a gear other than the one actually being used.
 - c) Vehicle moves when in Park.
- Refer to Chapter 7 for the shift cable adjustment procedure.

Transmission will not downshift with accelerator pedal pressed to the floor

- Kickdown cable out of adjustment (Chapter 7).

Engine will start in gears other than Park or Neutral

- Neutral start/reversing light switch malfunctioning (Chapter 7).
- Shift cable out of adjustment (Chapter 7).

Transmission slips, shifts roughly, is noisy, or has no drive in forward or reverse gears

- There are many probable causes for the above problems, but the home mechanic should be concerned with only one possibility - fluid level. Before taking the vehicle to a dealer service department or transmission repair workshop, check the level and condition of the fluid as described in Chapter 1. Correct the fluid level as necessary or change the fluid if needed. If the problem persists, have a professional diagnose the probable cause.

5 Brakes

Note: Before assuming that a brake problem exists, make sure that:

- a) The tyres are in good condition and properly inflated (Chapter 1).
- b) The front end alignment is correct (Chapter 10).
- c) The vehicle is not loaded with weight in an unequal manner.

Vehicle pulls to one side during braking

- Incorrect tyre pressures (Chapter 1).
- Front end out of line (have the front end aligned).
- Unmatched tyres on same axle.
- Restricted brake lines or hoses (Chapter 9).
- Malfunctioning caliper assembly (Chapter 9).
- Loose suspension parts (Chapter 10).
- Loose calipers (Chapter 9).
- Brake pads contaminated with oil or grease (Chapter 9).

Noise (high-pitched squeal when the brakes are applied)

- Front and/or rear disc brake pads worn out. The noise comes from the wear sensor rubbing against the disc. Replace pads with new ones immediately (Chapter 9).

Brake roughness or chatter (pedal pulsates)

- Excessive lateral disc runout (Chapter 9).
- Parallelism not within specifications (Chapter 9).
- Uneven pad wear caused by caliper not sliding due to improper clearance or dirt (Chapter 9).
- Defective disc (Chapter 9).

Excessive pedal effort required to stop vehicle

- Malfunctioning power brake servo (Chapter 9).
- Partial system failure (Chapter 9).
- Excessively worn pads (Chapter 9).
- Piston in caliper stuck or sluggish (Chapter 9).
- Brake pads contaminated with oil or grease (Chapter 9).
- New pads installed and not yet seated. It will take a while for the new material to seat against the disc.
- Accumulator in power hydraulic system defective (see a Jaguar dealer).

Excessive brake pedal travel

- Partial brake system failure (Chapter 9).
- Insufficient fluid in master cylinder (Chapters 1 and 9).
- Air trapped in system (Chapters 1 and 9).

Dragging brakes

- Master cylinder pistons not returning correctly (Chapter 9).
- Restricted brakes lines or hoses (Chapters 1 and 9).
- Incorrect handbrake adjustment (Chapter 9).

Grabbing or uneven braking action

- Malfunction of power brake servo unit (Chapter 9).
- Binding brake pedal mechanism (Chapter 9).
- Brake pads contaminated with oil or grease (Chapter 9).

5 Braking system (continued)

Brake pedal feels spongy when depressed

- Air in hydraulic lines (Chapter 9).
- Master cylinder mounting bolts loose (Chapter 9).
- Master cylinder defective (Chapter 9).

Brake pedal travels to the floor - no resistance

- Little or no fluid in the master cylinder reservoir caused by leaking caliper piston(s), damaged or disconnected brake lines (Chapter 9).

Handbrake does not hold

- Handbrake cable or handbrake shoes improperly adjusted (Chapter 9).
- Handbrake shoes need replacement (Chapter 9).

6 Suspension and steering systems

Note: Before attempting to diagnose the suspension and steering systems, perform the following preliminary checks:

- a) Tyres for wrong pressure and uneven wear.
- b) Steering universal joints from the column to the steering gear for loose connectors or wear.
- c) Front and rear suspension and the rack and pinion assembly for loose or damaged parts.
- d) Out-of-round or out-of-balance tyres, bent rims and loose and/or rough wheel bearings.

Vehicle pulls to one side

- Mismatched or uneven tyres (Chapter 10).
- Broken or sagging springs (Chapter 10).
- Wheel alignment out of specifications (Chapter 10).
- Front brakes dragging (Chapter 9).

Abnormal or excessive tyre wear

- Wheel alignment out of specifications (Chapter 10).
- Sagging or broken springs (Chapter 10).
- Tyre out-of-balance (Chapter 10).
- Worn shock absorber (Chapter 10).
- Overloaded vehicle.
- Tyres not rotated regularly.

Wheel makes a "thumping" noise

- Blister or bump on tyre (Chapter 10).
- Improper shock absorber action (Chapter 10).

Shimmy, shake or vibration

- Tyre or wheel out-of-balance or out-of-round (Chapter 10).
- Loose, worn or out-of-adjustment wheel bearings (Chapter 1).
- Worn tie-rod ends (Chapter 10).
- Worn balljoints (Chapter 10).
- Excessive wheel runout (Chapter 10).
- Blister or bump on tyre (Chapter 10).

Hard steering

- Lack of lubrication at balljoints, tie-rod ends and rack-and-pinion assembly (Chapter 1).
- Front wheel alignment (Chapter 10).
- Low tyre pressure(s) (Chapter 1).

Poor returnability of steering to centre

- Lack of lubrication at balljoints and tie-rod ends (Chapter 1).
- Binding in balljoints (Chapter 10).
- Binding in steering column (Chapter 10).
- Lack of lubricant in rack-and-pinion assembly (Chapter 10).
- Front wheel alignment (Chapter 10).

Abnormal noise at the front end

- Lack of lubrication at balljoints and tie-rod ends (Chapter 1).
- Damaged shock absorber mounting (Chapter 10).

- Worn control arm bushings or tie-rod ends (Chapter 10).
- Loose stabiliser bar (Chapter 10).
- Loose wheel nuts (Chapter 10).
- Loose suspension bolts (Chapter 10).

Wander or poor steering stability

- Mismatched or uneven tyres (Chapter 10).
- Lack of lubrication at balljoints and tie-rod ends (Chapter 1).
- Worn shock absorbers (Chapter 10).
- Loose stabiliser bar (Chapter 10).
- Broken or sagging springs (Chapter 10).
- Front or rear wheel alignment (Chapter 10).

Erratic steering when braking

- Wheel bearings worn (Chapter 1).
- Broken or sagging springs (Chapter 10).
- Leaking wheel cylinder or caliper (Chapter 9).
- Warped discs (Chapter 9).

Excessive pitching and/or rolling around corners or during braking

- Loose stabiliser bar (Chapter 10).
- Worn shock absorbers or mounts (Chapter 10).
- Broken or sagging springs (Chapter 10).
- Overloaded vehicle.

Suspension bottoms

- Overloaded vehicle.
- Worn shock absorbers (Chapter 10).
- Incorrect, broken or sagging springs (Chapter 10).
- Defective power hydraulic system or leaking rear shock absorbers (Chapter 10).

Cupped tyres (wear on both edges)

- Front wheel or rear wheel alignment (Chapter 10).
- Worn shock absorbers (Chapter 10).
- Wheel bearings worn (Chapter 10).
- Excessive tyre or wheel runout (Chapter 10).
- Worn balljoints (Chapter 10).

Excessive tyre wear on outside edge

- Inflation pressures incorrect (Chapter 1).
- Excessive speed in turns.
- Front end alignment incorrect (excessive toe-in). Have professionally aligned.
- Suspension arm bent or twisted (Chapter 10).

Excessive tyre wear on inside edge

- Inflation pressures incorrect (Chapter 1).
- Front end alignment incorrect (toe-out). Have professionally aligned.
- Loose or damaged steering components (Chapter 10).

6 Suspension and steering systems (continued)

Tyre tread worn in one place

- Tyres out-of-balance.
- Damaged or buckled wheel. Inspect and replace if necessary.
- Defective tyre (Chapter 1).

Excessive play or looseness in steering system

- Wheel bearing(s) worn (Chapter 10).

- Tie-rod end loose or worn (Chapter 10).
- Steering gear loose or worn (Chapter 10).

Rattling or clicking noise in rack-and-pinion

- Insufficient or improper power steering fluid in steering system (Chapter 10).
- Steering gear mounts loose (Chapter 10).

7 Electrical system

Battery will not hold a charge

- Alternator drivebelt defective or not adjusted properly (Chapter 1).
- Electrolyte level low (Chapter 1).
- Battery terminals loose or corroded (Chapter 1).
- Alternator not charging properly (Chapter 5).
- Loose, broken or faulty wiring in the charging circuit (Chapter 5).
- Short in vehicle wiring (Chapters 5 and 12).
- Internally defective battery (Chapters 1 and 5).
- Damaged left rear window harness shorting against glass rail inside door, causing battery to drain (Chapter 12).

Charge warning light fails to go out

- Faulty alternator or charging circuit (Chapter 5).
- Alternator drivebelt defective or out of adjustment (Chapter 1).
- Alternator voltage regulator inoperative (Chapter 5).

Charge warning light fails to come on when key is turned on

- Warning light bulb defective (Chapter 12).
- Fault in the printed circuit, dash wiring or bulb holder (Chapter 12).


A

ABS (Anti-lock brake system) A system, usually electronically controlled, that senses incipient wheel lockup during braking and relieves hydraulic pressure at wheels that are about to skid.

Air bag An inflatable bag hidden in the steering wheel (driver's side) or the dash or glovebox (passenger side). In a head-on collision, the bags inflate, preventing the driver and front passenger from being thrown forward into the steering wheel or windshield.

Air cleaner A metal or plastic housing, containing a filter element, which removes dust and dirt from the air being drawn into the engine.

Air filter element The actual filter in an air cleaner system, usually manufactured from pleated paper and requiring renewal at regular intervals.

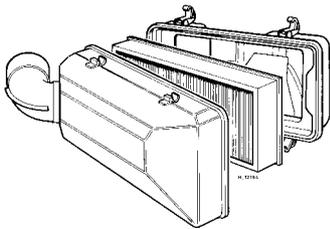

Air filter

Allen key A hexagonal wrench which fits into a recessed hexagonal hole.

Alligator clip A long-nosed spring-loaded metal clip with meshing teeth. Used to make temporary electrical connections.

Alternator A component in the electrical system which converts mechanical energy from a drivebelt into electrical energy to charge the battery and to operate the starting system, ignition system and electrical accessories.

Ampere (amp) A unit of measurement for the flow of electric current. One amp is the amount of current produced by one volt acting through a resistance of one ohm.

Anaerobic sealer A substance used to prevent bolts and screws from loosening. Anaerobic means that it does not require oxygen for activation. The Loctite brand is widely used.

Antifreeze A substance (usually ethylene glycol) mixed with water, and added to a vehicle's cooling system, to prevent freezing of the coolant in winter. Antifreeze also contains chemicals to inhibit corrosion and the formation of rust and other deposits that would tend to clog the radiator and coolant passages and reduce cooling efficiency.

Anti-seize compound A coating that reduces the risk of seizing on fasteners that are subjected to high temperatures, such as exhaust manifold bolts and nuts.

Asbestos A natural fibrous mineral with great heat resistance, commonly used in the composition of brake friction materials.

Asbestos is a health hazard and the dust created by brake systems should never be inhaled or ingested.

Axle A shaft on which a wheel revolves, or which revolves with a wheel. Also, a solid beam that connects the two wheels at one end of the vehicle. An axle which also transmits power to the wheels is known as a live axle.

Axleshaft A single rotating shaft, on either side of the differential, which delivers power from the final drive assembly to the drive wheels. Also called a driveshaft or a halfshaft.

B

Ball bearing An anti-friction bearing consisting of a hardened inner and outer race with hardened steel balls between two races.

Bearing The curved surface on a shaft or in a bore, or the part assembled into either, that permits relative motion between them with minimum wear and friction.




Bearing

Big-end bearing The bearing in the end of the connecting rod that's attached to the crankshaft.

Bleed nipple A valve on a brake wheel cylinder, caliper or other hydraulic component that is opened to purge the hydraulic system of air. Also called a bleed screw.

Brake bleeding Procedure for removing air from lines of a hydraulic brake system.

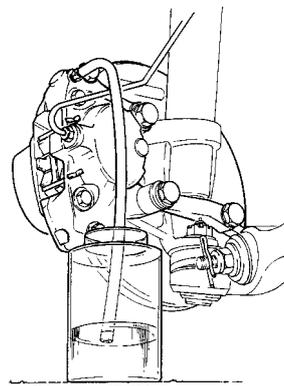

Brake bleeding

Brake disc The component of a disc brake that rotates with the wheels.

Brake drum The component of a drum brake that rotates with the wheels.

Brake linings The friction material which contacts the brake disc or drum to retard the vehicle's speed. The linings are bonded or riveted to the brake pads or shoes.

Brake pads The replaceable friction pads that pinch the brake disc when the brakes are applied. Brake pads consist of a friction material bonded or riveted to a rigid backing plate.

Brake shoe The crescent-shaped carrier to which the brake linings are mounted and which forces the lining against the rotating drum during braking.

Braking systems For more information on braking systems, consult the *Haynes Automotive Brake Manual*.

Breaker bar A long socket wrench handle providing greater leverage.

Bulkhead The insulated partition between the engine and the passenger compartment.

C

Caliper The non-rotating part of a disc-brake assembly that straddles the disc and carries the brake pads. The caliper also contains the hydraulic components that cause the pads to pinch the disc when the brakes are applied. A caliper is also a measuring tool that can be set to measure inside or outside dimensions of an object.

Camshaft A rotating shaft on which a series of cam lobes operate the valve mechanisms. The camshaft may be driven by gears, by sprockets and chain or by sprockets and a belt.

Canister A container in an evaporative emission control system; contains activated charcoal granules to trap vapours from the fuel system.




Canister

Carburettor A device which mixes fuel with air in the proper proportions to provide a desired power output from a spark ignition internal combustion engine.

Castellated Resembling the parapets along the top of a castle wall. For example, a castellated balljoint stud nut.

Castor In wheel alignment, the backward or forward tilt of the steering axis. Castor is positive when the steering axis is inclined rearward at the top.

Catalytic converter A silencer-like device in the exhaust system which converts certain pollutants in the exhaust gases into less harmful substances.

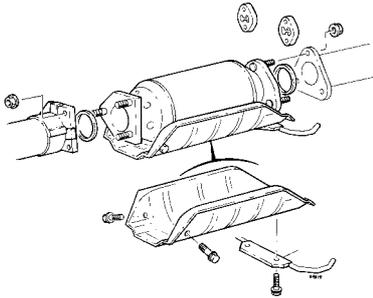

Catalytic converter

Circlip A ring-shaped clip used to prevent endwise movement of cylindrical parts and shafts. An internal circlip is installed in a groove in a housing; an external circlip fits into a groove on the outside of a cylindrical piece such as a shaft.

Clearance The amount of space between two parts. For example, between a piston and a cylinder, between a bearing and a journal, etc.

Coil spring A spiral of elastic steel found in various sizes throughout a vehicle, for example as a springing medium in the suspension and in the valve train.

Compression Reduction in volume, and increase in pressure and temperature, of a gas, caused by squeezing it into a smaller space.


Compression ratio The relationship between cylinder volume when the piston is at top dead centre and cylinder volume when the piston is at bottom dead centre.

Constant velocity (CV) joint A type of universal joint that cancels out vibrations caused by driving power being transmitted through an angle.

Core plug A disc or cup-shaped metal device inserted in a hole in a casting through which core was removed when the casting was formed. Also known as a freeze plug or expansion plug.

Crankcase The lower part of the engine block in which the crankshaft rotates.

Crankshaft The main rotating member, or shaft, running the length of the crankcase, with offset "throws" to which the connecting rods are attached.

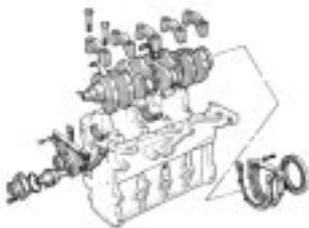

Crankshaft assembly

Crocodile clip See Alligator clip


D

Diagnostic code Code numbers obtained by accessing the diagnostic mode of an engine management computer. This code can be used to determine the area in the system where a malfunction may be located.

Disc brake A brake design incorporating a rotating disc onto which brake pads are squeezed. The resulting friction converts the energy of a moving vehicle into heat.

Double-overhead cam (DOHC) An engine that uses two overhead camshafts, usually one for the intake valves and one for the exhaust valves.

Drivebelt(s) The belt(s) used to drive accessories such as the alternator, water pump, power steering pump, air conditioning compressor, etc. off the crankshaft pulley.

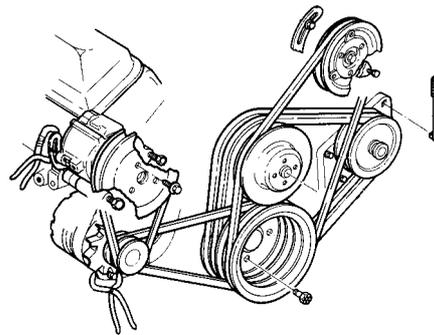

Accessory drivebelts

Driveshaft Any shaft used to transmit motion. Commonly used when referring to the axleshafts on a front wheel drive vehicle.

Drum brake A type of brake using a drum-shaped metal cylinder attached to the inner surface of the wheel. When the brake pedal is pressed, curved brake shoes with friction linings press against the inside of the drum to slow or stop the vehicle.

E

EGR valve A valve used to introduce exhaust gases into the intake air stream.

Electronic control unit (ECU) A computer which controls (for instance) ignition and fuel injection systems, or an anti-lock braking system. For more information refer to the *Haynes Automotive Electrical and Electronic Systems Manual*.

Electronic Fuel Injection (EFI) A computer controlled fuel system that distributes fuel through an injector located in each intake port of the engine.

Emergency brake A braking system, independent of the main hydraulic system, that can be used to slow or stop the vehicle if the primary brakes fail, or to hold the vehicle stationary even though the brake pedal isn't depressed. It usually consists of a hand lever that actuates either front or rear brakes mechanically through a series of cables and linkages. Also known as a handbrake or parking brake.

Endfloat The amount of lengthwise movement between two parts. As applied to a crankshaft, the distance that the crankshaft can move forward and back in the cylinder block.

Engine management system (EMS) A computer controlled system which manages the fuel injection and the ignition systems in an integrated fashion.

Exhaust manifold A part with several passages through which exhaust gases leave the engine combustion chambers and enter the exhaust pipe.

F

Fan clutch A viscous (fluid) drive coupling device which permits variable engine fan speeds in relation to engine speeds.

Feeler blade A thin strip or blade of hardened steel, ground to an exact thickness, used to check or measure clearances between parts.



Feeler blade

Firing order The order in which the engine cylinders fire, or deliver their power strokes, beginning with the number one cylinder.

Flywheel A heavy spinning wheel in which energy is absorbed and stored by means of momentum. On cars, the flywheel is attached to the crankshaft to smooth out firing impulses.

Free play The amount of travel before any action takes place. The "looseness" in a linkage, or an assembly of parts, between the initial application of force and actual movement. For example, the distance the brake pedal moves before the pistons in the master cylinder are actuated.

Fuse An electrical device which protects a circuit against accidental overload. The typical fuse contains a soft piece of metal which is calibrated to melt at a predetermined current flow (expressed as amps) and break the circuit.

Fusible link A circuit protection device consisting of a conductor surrounded by heat-resistant insulation. The conductor is smaller than the wire it protects, so it acts as the weakest link in the circuit. Unlike a blown fuse, a failed fusible link must frequently be cut from the wire for replacement.


G

Gap The distance the spark must travel in jumping from the centre electrode to the side electrode in a spark plug. Also refers to the spacing between the points in a contact breaker assembly in a conventional points-type ignition, or to the distance between the reluctor or rotor and the pickup coil in an electronic ignition.



Adjusting spark plug gap

Gasket Any thin, soft material - usually cork, cardboard, asbestos or soft metal - installed between two metal surfaces to ensure a good seal. For instance, the cylinder head gasket seals the joint between the block and the cylinder head.

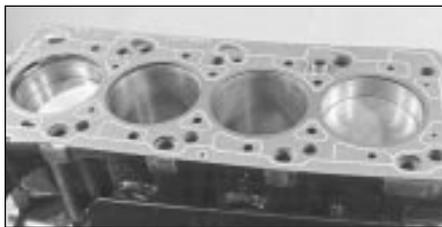

Gasket

Gauge An instrument panel display used to monitor engine conditions. A gauge with a movable pointer on a dial or a fixed scale is an analogue gauge. A gauge with a numerical readout is called a digital gauge.

H

Halfshaft A rotating shaft that transmits power from the final drive unit to a drive wheel, usually when referring to a live rear axle.

Harmonic balancer A device designed to reduce torsion or twisting vibration in the crankshaft. May be incorporated in the crankshaft pulley. Also known as a vibration damper.

Hone An abrasive tool for correcting small irregularities or differences in diameter in an engine cylinder, brake cylinder, etc.

Hydraulic tappet A tappet that utilises hydraulic pressure from the engine's lubrication system to maintain zero clearance (constant contact with both camshaft and valve stem). Automatically adjusts to variation in valve stem length. Hydraulic tappets also reduce valve noise.

I

Ignition timing The moment at which the spark plug fires, usually expressed in the number of crankshaft degrees before the piston reaches the top of its stroke.

Inlet manifold A tube or housing with passages through which flows the air-fuel mixture (carburettor vehicles and vehicles with throttle body injection) or air only (port fuel-injected vehicles) to the port openings in the cylinder head.

J

Jump start Starting the engine of a vehicle with a discharged or weak battery by attaching jump leads from the weak battery to a charged or helper battery.

L

Load Sensing Proportioning Valve (LSPV) A brake hydraulic system control valve that works like a proportioning valve, but also takes into consideration the amount of weight carried by the rear axle.

Locknut A nut used to lock an adjustment nut, or other threaded component, in place. For example, a locknut is employed to keep the adjusting nut on the rocker arm in position.

Lockwasher A form of washer designed to prevent an attaching nut from working loose.

M

MacPherson strut A type of front suspension system devised by Earle MacPherson at Ford of England. In its original form, a simple lateral link with the anti-roll bar creates the lower control arm. A long strut - an integral coil spring and shock absorber - is mounted between the body and the steering knuckle. Many modern so-called MacPherson strut systems use a conventional lower A-arm and don't rely on the anti-roll bar for location.

Multimeter An electrical test instrument with the capability to measure voltage, current and resistance.

N

NOx Oxides of Nitrogen. A common toxic pollutant emitted by petrol and diesel engines at higher temperatures.

O

Ohm The unit of electrical resistance. One volt applied to a resistance of one ohm will produce a current of one amp.

Ohmmeter An instrument for measuring electrical resistance.

O-ring A type of sealing ring made of a special rubber-like material; in use, the O-ring is compressed into a groove to provide the sealing action.

Overhead cam (ohc) engine An engine with the camshaft(s) located on top of the cylinder head(s).

Overhead valve (ohv) engine An engine with the valves located in the cylinder head, but with the camshaft located in the engine block.

Oxygen sensor A device installed in the engine exhaust manifold, which senses the oxygen content in the exhaust and converts this information into an electric current. Also called a Lambda sensor.

P

Phillips screw A type of screw head having a cross instead of a slot for a corresponding type of screwdriver.

Plastigage A thin strip of plastic thread, available in different sizes, used for measuring clearances. For example, a strip of Plastigage is laid across a bearing journal. The parts are assembled and dismantled; the width of the crushed strip indicates the clearance between journal and bearing.



Plastigage

Propeller shaft The long hollow tube with universal joints at both ends that carries power from the transmission to the differential on front-engined rear wheel drive vehicles.

Proportioning valve A hydraulic control valve which limits the amount of pressure to the rear brakes during panic stops to prevent wheel lock-up.

R

Rack-and-pinion steering A steering system with a pinion gear on the end of the steering shaft that mates with a rack (think of a geared wheel opened up and laid flat). When the steering wheel is turned, the pinion turns, moving the rack to the left or right. This movement is transmitted through the track rods to the steering arms at the wheels.

Radiator A liquid-to-air heat transfer device designed to reduce the temperature of the coolant in an internal combustion engine cooling system.

Refrigerant Any substance used as a heat transfer agent in an air-conditioning system. R-12 has been the principle refrigerant for many years; recently, however, manufacturers have begun using R-134a, a non-CFC substance that is considered less harmful to the ozone in the upper atmosphere.

Rocker arm A lever arm that rocks on a shaft or pivots on a stud. In an overhead valve engine, the rocker arm converts the upward movement of the pushrod into a downward movement to open a valve.

Rotor In a distributor, the rotating device inside the cap that connects the centre electrode and the outer terminals as it turns, distributing the high voltage from the coil secondary winding to the proper spark plug. Also, that part of an alternator which rotates inside the stator. Also, the rotating assembly of a turbocharger, including the compressor wheel, shaft and turbine wheel.


Runout The amount of wobble (in-and-out movement) of a gear or wheel as it's rotated. The amount a shaft rotates "out-of-true." The out-of-round condition of a rotating part.

S

Sealant A liquid or paste used to prevent leakage at a joint. Sometimes used in conjunction with a gasket.

Sealed beam lamp An older headlight design which integrates the reflector, lens and filaments into a hermetically-sealed one-piece unit. When a filament burns out or the lens cracks, the entire unit is simply replaced.

Serpentine drivebelt A single, long, wide accessory drivebelt that's used on some newer vehicles to drive all the accessories, instead of a series of smaller, shorter belts. Serpentine drivebelts are usually tensioned by an automatic tensioner.

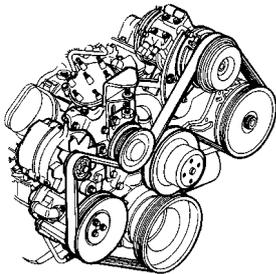

Serpentine drivebelt

Shim Thin spacer, commonly used to adjust the clearance or relative positions between two parts. For example, shims inserted into or under bucket tappets control valve clearances. Clearance is adjusted by changing the thickness of the shim.

Slide hammer A special puller that screws into or hooks onto a component such as a shaft or bearing; a heavy sliding handle on the shaft bottoms against the end of the shaft to knock the component free.

Sprocket A tooth or projection on the periphery of a wheel, shaped to engage with a chain or drivebelt. Commonly used to refer to the sprocket wheel itself.

Starter inhibitor switch On vehicles with an automatic transmission, a switch that prevents starting if the vehicle is not in Neutral or Park.

Strut See MacPherson strut.

T

Tappet A cylindrical component which transmits motion from the cam to the valve stem, either directly or via a pushrod and rocker arm. Also called a cam follower.

Thermostat A heat-controlled valve that regulates the flow of coolant between the cylinder block and the radiator, so maintaining optimum engine operating temperature. A thermostat is also used in some air cleaners in which the temperature is regulated.

Thrust bearing The bearing in the clutch assembly that is moved in to the release levers by clutch pedal action to disengage the clutch. Also referred to as a release bearing.

Timing belt A toothed belt which drives the camshaft. Serious engine damage may result if it breaks in service.

Timing chain A chain which drives the camshaft.

Toe-in The amount the front wheels are closer together at the front than at the rear. On rear wheel drive vehicles, a slight amount of toe-in is usually specified to keep the front wheels running parallel on the road by offsetting other forces that tend to spread the wheels apart.

Toe-out The amount the front wheels are closer together at the rear than at the front. On front wheel drive vehicles, a slight amount of toe-out is usually specified.

Tools For full information on choosing and using tools, refer to the *Haynes Automotive Tools Manual*.

Tracer A stripe of a second colour applied to a wire insulator to distinguish that wire from another one with the same colour insulator.

Tune-up A process of accurate and careful adjustments and parts replacement to obtain the best possible engine performance.

Turbocharger A centrifugal device, driven by exhaust gases, that pressurises the intake air. Normally used to increase the power output from a given engine displacement, but can also be used primarily to reduce exhaust emissions (as on VW's "Umwelt" Diesel engine).

U

Universal joint or U-joint A double-pivoted connection for transmitting power from a driving to a driven shaft through an angle. A U-joint consists of two Y-shaped yokes and a cross-shaped member called the spider.

V

Valve A device through which the flow of liquid, gas, vacuum, or loose material in bulk may be started, stopped, or regulated by a movable part that opens, shuts, or partially obstructs one or more ports or passageways. A valve is also the movable part of such a device.

Valve clearance The clearance between the valve tip (the end of the valve stem) and the rocker arm or tappet. The valve clearance is measured when the valve is closed.

Vernier caliper A precision measuring instrument that measures inside and outside dimensions. Not quite as accurate as a micrometer, but more convenient.

Viscosity The thickness of a liquid or its resistance to flow.

Volt A unit for expressing electrical "pressure" in a circuit. One volt that will produce a current of one ampere through a resistance of one ohm.

W

Welding Various processes used to join metal items by heating the areas to be joined to a molten state and fusing them together. For more information refer to the *Haynes Automotive Welding Manual*.

Wiring diagram A drawing portraying the components and wires in a vehicle's electrical system, using standardised symbols. For more information refer to the *Haynes Automotive Electrical and Electronic Systems Manual*.

Note: References throughout this index are in the form - "Chapter number" • "page number"

A

ABS fault finding - 9•2
Accelerator cable - 4•8
Acknowledgements - 0•4
Aerial - 12•8
Air cleaner - 1•14, 4•7
Air conditioning - 3•2, 3•7, 3•10, 3•11, 3•13, 3•14
Air induction system - 4•9
Air Injector Reactor (AIR) system - 6•8
Air intake plenum - 4•13
Airbag - 0•5, 12•14
Alternator - 5•6
Amplifier - 5•3
Anti-lock Brake system (ABS) - 9•2
Anti-roll bar - 10•3
Anti-theft system - REF•1
Antifreeze - 0•11, 0•16, 1•2, 1•20, 3•2
Asbestos - 0•5
ATF - 0•16
Automatic transmission - 7•1 *et seq*
 fault finding - 7•1, REF•15
 fluid - 0•16, 1•2, 1•11, 1•19
 filter - 1•19
Auxiliary shaft - 2A•8

B

Balljoints - 10•4
Battery - 0•5, 0•15, 1•9, 5•1, 5•1
Big-end bearings - 2B•13, 2B•17
Bleeding
 brake system - 9•10
 power steering - 10•11
Block - 2B•10, 2B•11
Blower motors - 3•7
Body corrosion - REF•11
Body electrical system - 12•1 *et seq*
Bodywork and fittings - 11•1 *et seq*
Bonnet - 11•3, 11•4
Boot - 11•7
 lid - 11•3, 11•6, 11•7,
Boots (steering) - 10•9
Brake fluid - 0•12, 0•16, 1•20
Brake lights - 12•12
 switch - 9•13
Brake servo - 1•12
Braking system - 1•12, 9•1 *et seq*
 fault finding - REF•15, REF•16
 MOT checks - REF•8 to REF•10
Bulbs - 0•15, 12•11
Bumpers - 11•5
Burning - 0•5

C

Cables - 4•8, 5•2, 7•2, 7•4, 9•10, 9•11, 11•4, 11•10
Calipers - 9•3
Camshafts - 2A•9
Capacities - 1•2
Carpets - 11•1
Cassette - REF•1
Catalytic converter - 6•12
Central locking - 12•13
Centre console - 11•11
Charcoal canister - 6•11
Charging - 1•10
Charging system - 5•5
Circuit breakers - 12•3
CO emissions (mixture) - REF•11
Coil (HT) - 5•3
Coil spring - 10•5, 10•6
Compression check - 2B•3
Compressor - 3•13
Condenser - 3•13
Connecting rods - 2B•9, 2B•12, 2B•17, 2B•18
Console - 11•11, 11•12
Continuity check - 12•2
Control arms - 10•5, 10•6, 10•8
Conversion factors - REF•2
Coolant - 0•11, 0•16, 1•2, 1•20, 3•2
Coolant reservoir - 3•4, 3•5
Coolant temperature sensor - 6•3
Cooling fans - 3•3
Cooling system fault finding - REF•14
Cooling, heating and air conditioning systems - 3•1 *et seq*
Courtesy lights - 12•12
Cowl cover - 11•14
Crankcase ventilation system - 1•16, 6•11
Crankshaft - 2A•5, 2A•17, 2B•10, 2B•13, 2B•16
 position sensor - 6•7
Cruise control - 12•13
Crushing - 0•5
Cylinder head - 2A•13, 2B•6, 2B•7, 2B•8
Cylinder honing - 2B•12

D

Dashboard - 11•13
Dents - 11•2
Differential - 8•1, 8•5
 oil - 1•2, 1•11, 1•20
Dimensions - REF•1
Direction indicators - 12•4, 12•11, 12•12
Discs - 9•4
Distributor - 5•4
Doors - 11•7, 11•8, 11•9, 11•10, 11•10, REF•9
Drivebelt - 1•16
Driveplate - 2A•16
Driveshafts - 8•1, 8•4, 8•5, REF•10
Drivetrain - 1•14, 8•1 *et seq*

E

Earth check - 12•2
 ECU - 6•2
 EGR gas temperature sensor - 6•7
 Electric shock - 0•5
 Electric windows - 12•13
 Electrical equipment - 1•14, REF•9
 Electrical system fault finding - 12•1, REF•17
 Electronic control system and ECU - 4•9, 6•2
 Electronic Fuel Injection (EFI) system - 4•9, 4•10
Emissions and engine control systems - 6•1 *et seq*
Engine electrical systems - 5•1 *et seq*
Engine in-car repair procedures - 2A•1 *et seq*
 Engine fault finding - ref•13, ref•14
 Engine oil - 0•11, 0•16, 1•2, 1•6
Engine removal and overhaul procedures - 2B•1 *et seq*
 Environmental considerations - REF•5
 Evaporative Emission Control (EVAP) system - 6•10
 Evaporator and expansion valve - 3•14
 Exhaust emission checks - REF•11
 Exhaust Gas Recirculation (EGR) system - 6•9
 Exhaust manifolds - 2A•4
 Exhaust system - 1•11, 4•2, 4•14, REF•10
 Expansion tank - 3•4, 3•5

F

Fans - 3•3
Fault finding - REF•12 *et seq*
 ABS - 9•2
 automatic transmission - 7•1, REF•15
 brakes - REF•15, REF•16
 cooling system - REF•14
 electrical system - 12•1, REF•17
 engine - REF•13, REF•14
 fuel system - REF•14
 suspension and steering systems - REF•16, REF•17
 Filling (bodywork repair) - 11•2
 Filters
 automatic transmission fluid - 1•19
 fuel - 1•15
 oil - 1•6
 Fire - 0•5
 Fluids - 0•16
Fuel and exhaust systems - 4•1 *et seq*, REF•11
 Fuel filter - 1•15
 Fuel gauge - 12•7
 Fuel pressure relief - 4•2
 Fuel system fault finding - REF•14
 Fume or gas intoxication - 0•5
 Fuses - 0•15, 12•2

G

Gaiters - 10•9
 Gashes - 11•2
 Gaskets - REF•5
 Glass - 11•3, 11•10, 11•11, 12•13
Glossary of technical terms - REF•3, REF•18 *et seq*
 Glove box - 11•13
 Grille - 11•5

H

Handbrake - 1•12, 1•20, 9•1, 9•10, 9•11, REF•8
 Handles - 11•9, 11•10
 Hazard flasher - 12•4
 HC emissions - REF•11
 Headlights - 1•18, 12•9, 12•10, 12•11
 Heated rear window - 12•8
 Heater - 3•2, 3•7, 3•9, 3•10, 3•11, 3•12
 High-mounted brake light - 12•12
 Hinges - 11•3
 Horn - 12•11
 Hoses - 1•10
 Hub bearings - 1•17, 10•8
 Hydraulic system - 0•16
 Hydrofluoric acid - 0•5

I

Idle Speed Control (ISC) motor - 4•11
 Ignition switch - 12•6
 Ignition system - 1•15
 In-tank fuel pumps - 4•4
 Indicators - 12•4, 12•11, 12•12
 Inertia switch - 4•1, 12•12
 Information sensors - 6•3
 Injectors - 4•12
 Instruments - 1•14, 11•12, 12•6, 12•7, 12•12
 Intake Air Temperature (IAT) sensor - 6•7
 Intake manifold - 2A•4
 Interior lights - 12•12
 Introduction - 0•4

J

Jacking - REF•1
 Joint mating faces - REF•5
 Jump starting - 0•7

K

Kickdown cable - 7•2
 Knee bolster - 11•13

L

Latch - 11•4, 11•7, 11•9
 Leaks - 0•9, 1•10, 7•2
 Locknuts, locktabs and washers - REF•5
 Locks - 11•3, 11•7, 11•9, 12•6
 Lubricants - 0•16

M

Main bearings - 2B•13, 2B•16
 Manifolds - 2A•4
 Manual valve - 7•7
 Mass Airflow (MAF) sensor - 6•6
 Master cylinder - 9•6
 Mirrors - 11•11, 12•14, REF•8
MOT test checks - REF•8 *et seq*
 Mounts - 2A•18, 7•8
 Multi Point Fuel Injection (MPFI) system - 4•1

N

Neutral start switch - 7•5
 Notes for UK readers - 0•4, REF•3
 Number plate light - 12•12

O

Obtaining diagnostic code output - 6•3
 Oil cooler - 3•6
 Oil filter - 1•6
 Oil gauge - 12•7
 Oil pump - 2A•15
 Oil seals - 2A•5, 2A•17, 2B•17, 7•7, 8•4, 8•5, REF•5
 Oil, differential - 1•2, 1•11, 1•20
 Oil, engine - 0•11, 0•16, 1•2, 1•6
 On Board Diagnosis (OBD) system - 6•2
 Open circuit check - 12•2
 Output shaft - 7•7
 Oxygen sensor - 6•4

P

Pads (brake) - 9•1, 9•2
 Painting - 11•2
 Parking lights - 12•11
 Piston rings - 2B•15
 Pistons - 2B•9, 2B•12, 2B•17
 Poisonous or irritant substances - 0•5
 Power hydraulic system - 0•16
 fluid - 1•9
 Power steering - 10•10, 10•11
 fluid - 0•13, 0•16
 Propshaft - 1•18, 8•1, 8•2, 8•3
 Punctures - 0•8

R

Radiator - 3•4
 grille - 11•5
 Radio - 12•7, REF•1
 Rear lights - 12•12
 Receiver/drier - 3•12
 Regulator (window) - 11•10
 Relays - 12•3
 Repair procedures - REF•5
 Reversing lights - 7•5, 12•12
 Road test - 1•14
Roadside repairs - 0•6 *et seq*
Routine maintenance and servicing - 1•1 *et seq*
 Rust holes - 11•2

S

Safety first - 0•5
 Scalding - 0•5
 Scratches - 11•2

Screw threads and fastenings - REF•5
 Seat belts - 1•13, REF•9
 Seats - 11•14, REF•9
 Self-levelling rear suspension system - 10•3
 Servo - 1•12, 9•1, 9•9
 Shift cable - 7•4
 Shock absorber - 10•4, 10•6, REF•9, REF•10
 Shoes (brake) - 1•20, 9•11
 Short circuit check - 12•1
 Side marker lights - 12•11
 Spare parts - REF•4
 Spark plugs - 1•7, 1•14
 Speakers - 12•7
 Speed sensor - 6•7
 Spoiler - 11•5
 Springs - 10•5, 10•6, REF•10
 Starter motor - 5•7
 Steering - See *Suspension and steering systems*
 Steering wheel and column - 11•13, 12•5, REF•8
 Sump - 2A•14
 Sunroof - 12•14
 Supplementary air valve - 4•13
Suspension and steering systems - 1•12, 10•1 *et seq*, REF•9, REF•10
 fault finding - REF•16, REF•17
 Switches - 4•1, 7•5, 9•13, 12•5, 12•6, 12•12

T

Tail lights - 12•12
 Temperature gauge - 12•7
 Temperature sender unit - 3•7
 Thermostat - 3•2
 Throttle body - 4•10
 Throttle potentiometer - 6•5
 Tie-rod ends - 10•9
 Timing chains - 2A•6
 Tools - REF•5, REF•6, REF•7
 Top Dead Centre (TDC) for number one piston - 2A•2
 Torque converter - 7•7
 Towing - 0•6
 Trim panels - 11•7, 11•13
 Tyres - 0•14, 10•11, REF•11

U

UK readers information - 0•4, REF•3
 Universal joint - 8•1, 8•2, 8•5
 Upholstery - 11•1

V

Vacuum gauge checks - 2B•3
 Valve cover - 2A•3
 Valve lifters - 2A•9
 Valves - 2B•8
 Vehicle identification - REF•4, REF•9
 Vehicle support - REF•1
 Vinyl trim - 11•1
 Voltage checks - 12•1

W

Washer fluid - 0•12

Water pump - 3•6

Weekly checks - 0•10 *et seq*

Weights - REF•1

Wheel alignment - 1•18, 10•11

Wheel bearings - 1•17, 10•8, REF•10

Wheel changing - 0•8

Wheels - 10•11, REF•11

Windows - 11•10, 11•11, 12•13

Windscreen - 11•3, REF•8

Wing - 11•6

Wiper blades - 0•13

Wiper motor - 12•8

Wiring diagrams - 12•15 *et seq*

Working facilities - REF•7

Preserving Our Motoring Heritage



<
The Model J Duesenberg Derham Tourster. Only eight of these magnificent cars were ever built – this is the only example to be found outside the United States of America

Almost every car you've ever loved, loathed or desired is gathered under one roof at the Haynes Motor Museum. Over 300 immaculately presented cars and motorbikes represent every aspect of our motoring heritage, from elegant reminders of bygone days, such as the superb Model J Duesenberg to curiosities like the bug-eyed BMW Isetta. There are also many old friends and flames. Perhaps you remember the 1959 Ford Popular that you did your courting in? The magnificent 'Red Collection' is a spectacle of classic sports cars including AC, Alfa Romeo, Austin Healey, Ferrari, Lamborghini, Maserati, MG, Riley, Porsche and Triumph.

A Perfect Day Out


Each and every vehicle at the Haynes Motor Museum has played its part in the history and culture of Motoring. Today, they make a wonderful spectacle and a great day out for all the family. Bring the kids, bring Mum and Dad, but above all bring your camera to capture those golden memories for ever. You will also find an impressive array of motoring memorabilia, a comfortable 70 seat video cinema and one of the most extensive transport book shops in Britain. The Pit Stop Cafe serves everything from a cup of tea to wholesome, home-made meals or, if you prefer, you can enjoy the large picnic area nestled in the beautiful rural surroundings of Somerset.



>
John Haynes O.B.E.,
Founder and
Chairman of the
museum at the wheel
of a Haynes Light 12.



<
Graham Hill's Lola
Cosworth Formula 1
car next to a 1934
Riley Sports.

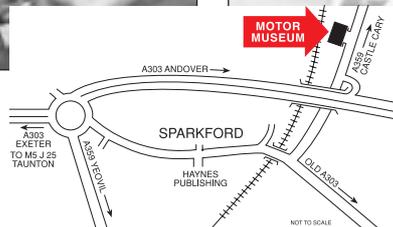

The Museum is situated on the A359 Yeovil to Frome road at Sparkford, just off the A303 in Somerset. It is about 40 miles south of Bristol, and 25 minutes drive from the M5 intersection at Taunton.

Open 9.30am - 5.30pm (10.00am - 4.00pm Winter) 7 days a week, except Christmas Day, Boxing Day and New Years Day
Special rates available for schools, coach parties and outings Charitable Trust No. 292048